

PARTS LIST

PUMP

AB H

Keep this parts lists with Installation, Operation and Maintenance Instructions.

To order the required spare parts, indicate the desired Reference(s).


- ◆ Sets of parts or parts available to order.

Z.I. la Plaine des Isles - 2 rue des Caillottes F-89000 AUXERRE - France


Tel : +33 (0)3 86 49 86 30 • Fax : +33 (0)3 86 49 87 17

contact.mouvex@psgdover.com • www.mouvex.com


AB H

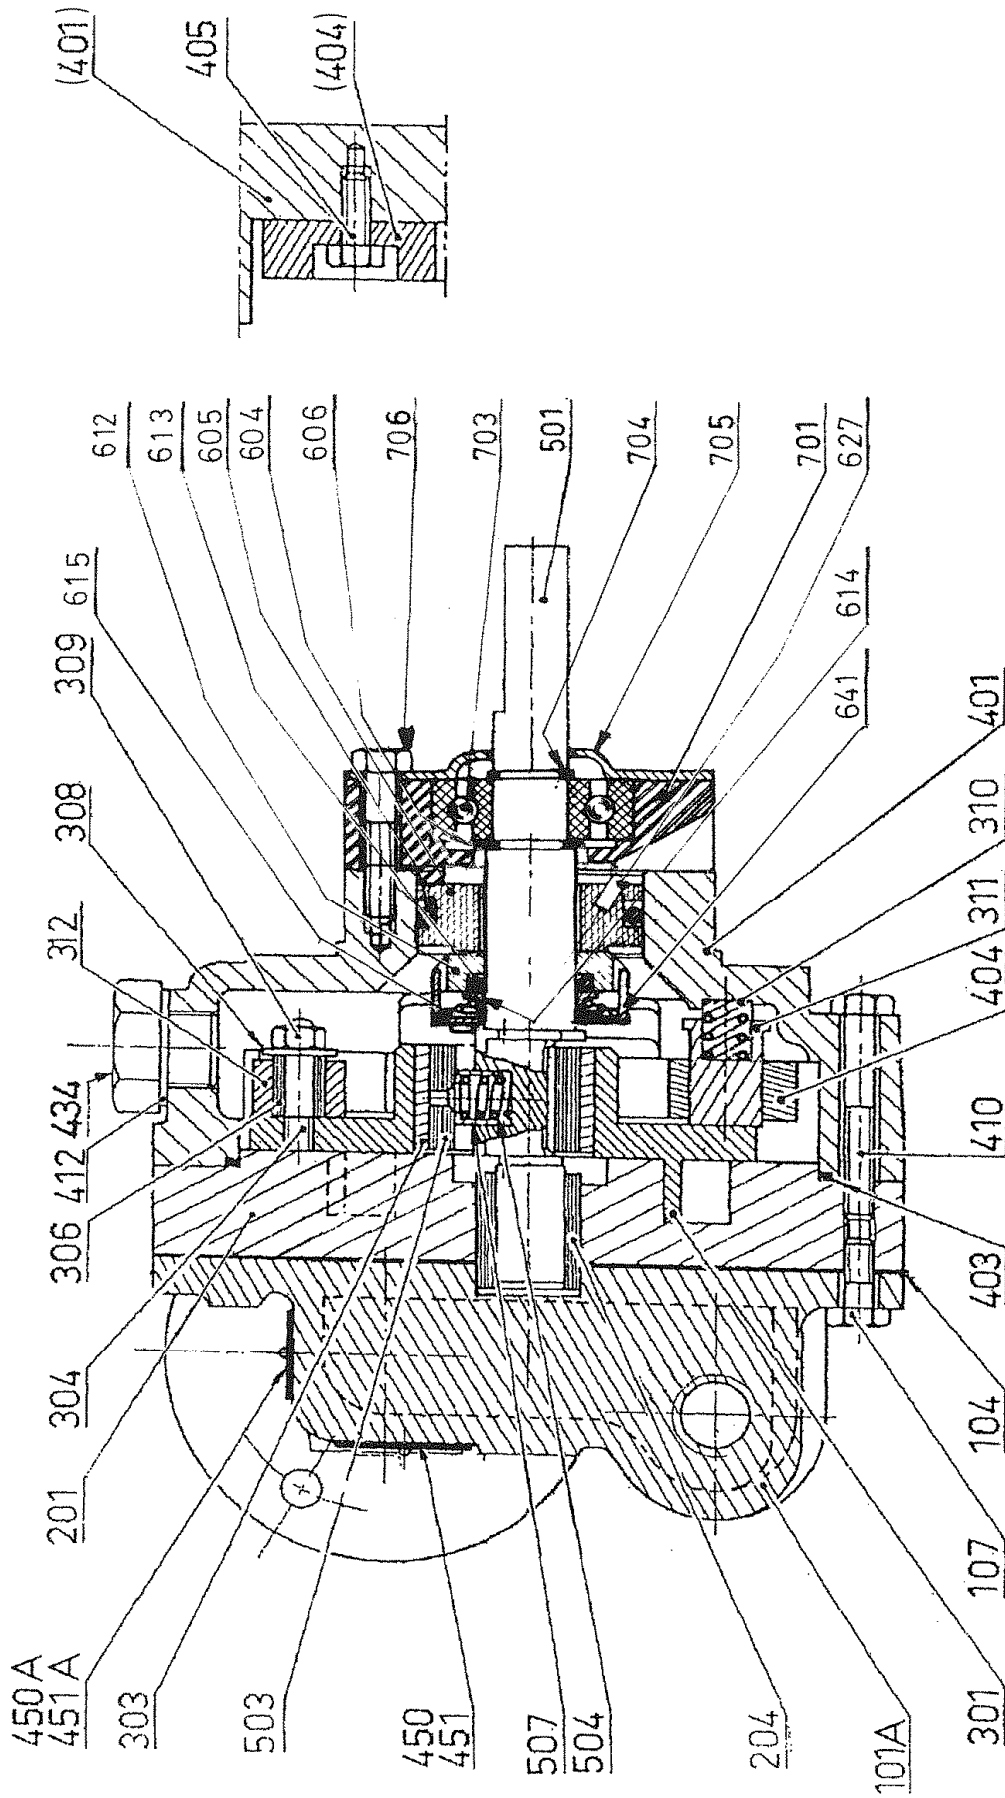

Mechanical seal

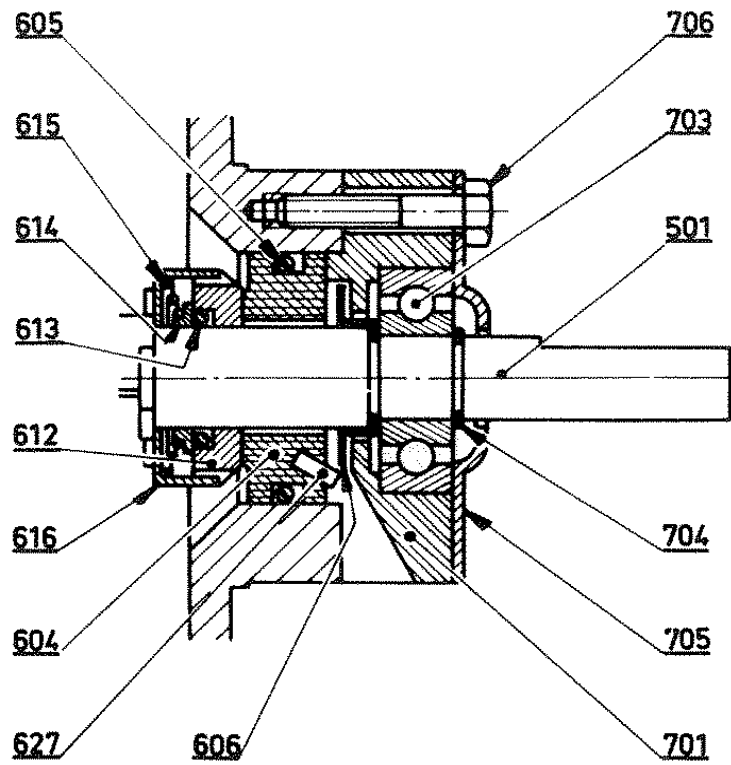

Bypass

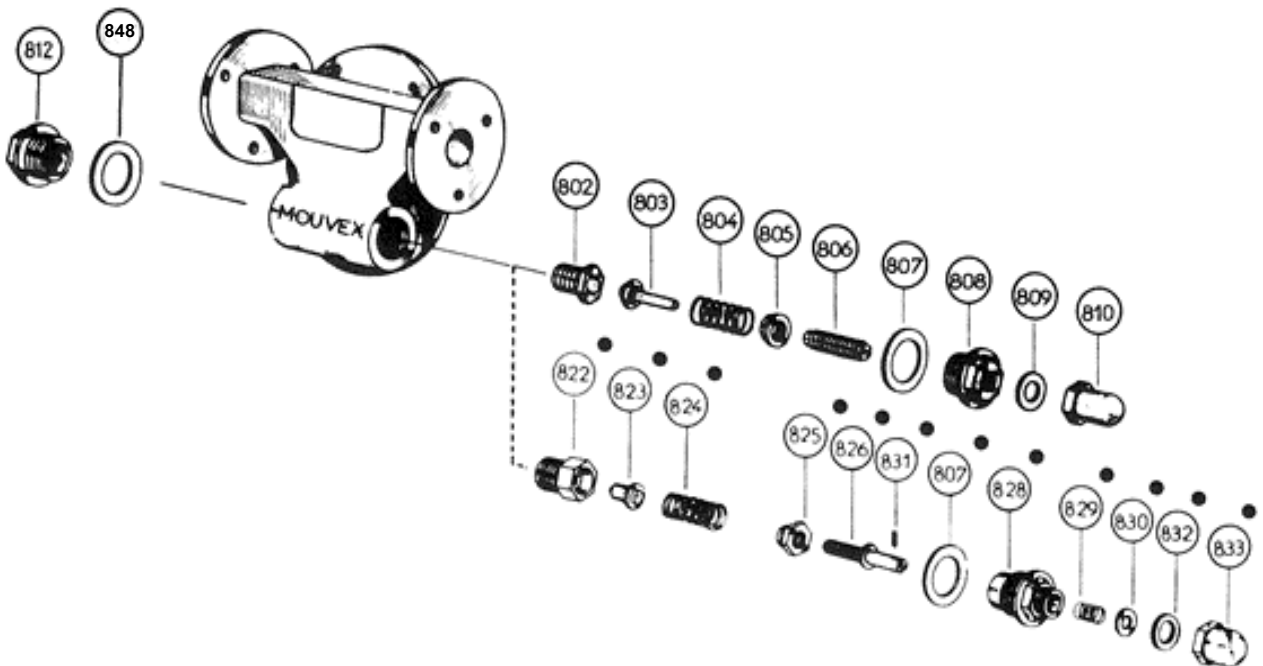

AB H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
98	◆	FULL SET OF SCREWS	1	AUX301278		
107		SCREW	(5)			
410		SCREW	(5)			
706		SCREW	(3)			
99	◆	FULL SET OF SEALS FKM	1	AUX301280	■	
104		SEAL	(1)			
403	◆	O-RING	1	AUX200828		
101A	◆	MAIN BODY	1	AUX203453		
200	◆	CYLINDER, COMPLETE	1	AUX301265	■	
201		CYLINDER	(1)			●
204	◆	BUSHING	1	AUX201236	■	●
300	◆	COMPLETE PISTON	1	AUX303004	■	●
3010		PISTON + BLOCK PIN	(1)			
3980	◆	SLIDE BLOCK, COMPLETE	1	AUX305211		
307	◆	SLIDE BLOCK + BUSHING	1	AUX316827		
306		BUSHING	(1)			
312		SLIDE BLOCK	(1)			
308		WASHER	(1)			
309		NUT	(1)			
400	◆	COMPLETE FRONT COVER	1	AUX301269		
401		FRONT COVER	(1)			
402	◆	FRONT BUSHING SET AND GUIDE BLOCK	1	AUX301271		
310		SPRING	(2)			
311		BACK PISTON SUPPORT	(2)			●
404		GUIDE	(1)			●
405		SCREW	(4)			
412		SEAL	(1)			
434		PLUG	(1)			
403	◆	O-RING	1	AUX200828		
500	◆	SHAFT COMPLETE	1	AUX312266	■	
501	◆	SHAFT	1	AUX219460		
503	◆	PISTON BEARING	1	AUX203464		●
598	◆	BEARING SPRING COMPLETE	1	AUX300238		
504		SPRING	(1)			
507		BUSHING	(1)			
600	◆	MECHANICAL SEAL MONODIR LR VT	1	AUX301276	■	
604		STATIONARY SEAL FACE	(1)			
605		SEAL	(1)			
606		WASHER	(1)			
612		SEAL HOUSING	(1)			●
613		O-RING	(1)			
614		SPRING BASE	(1)			
615		SPRING	(1)			
627	◆	PIN	1	AUX200115		
641		DRIVER	(1)			
699	◆	FULL SET OF MOUNTING SCREWS FKM	1	AUX301282		
605		SEAL	(1)			
613		O-RING	(1)			
704		RING	(1)			
700	◆	BALL BEARINGS COMPLETE	1	AUX301277		
701		BEARING CAGE	(1)			
703	◆	BALL BEARING	1	AUX200545		●
704		RING	(1)			
705		BEARING COVER	(1)			

AB H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
800	◆	BYPASS COMPLETE	1	AUX300278		
804	◆	SPRING	1	AUX201171		
810	◆	BYPASS CAP	1	AUX203388		
812		PLUG	(1)			
861	◆	SET VALVE SEAT	1	AUX300279		
802		VALVE SEAT	(1)			
803		VALVE	(1)			
805		SPRING GUIDE	(1)			
898	◆	SET ADJUSTING SCREW	1	AUX300280		
806		ADJUSTING SCREW	(1)			
808		NUT	(1)			
899	◆	SET OF BYPASS SEALS	1	AUX300281	■	
807		SEAL	(1)			
809		SEAL	(1)			
848		SEAL	(1)			