



P.L. : 1005-B01

Effective
Replaces

September 2020
November 2014

PARTS LIST

PUMP

AG H

Keep this parts lists with Installation, Operation and Maintenance Instructions.

To order the required spare parts, indicate the desired Reference(s).


- ◆ Sets of parts or parts available to order.

Z.I. la Plaine des Isles - 2 rue des Caillottes F-89000 AUXERRE - France


Tel : +33 (0)3 86 49 86 30 • Fax : +33 (0)3 86 49 87 17

contact.mouvex@psgdover.com • www.mouvex.com


AG H

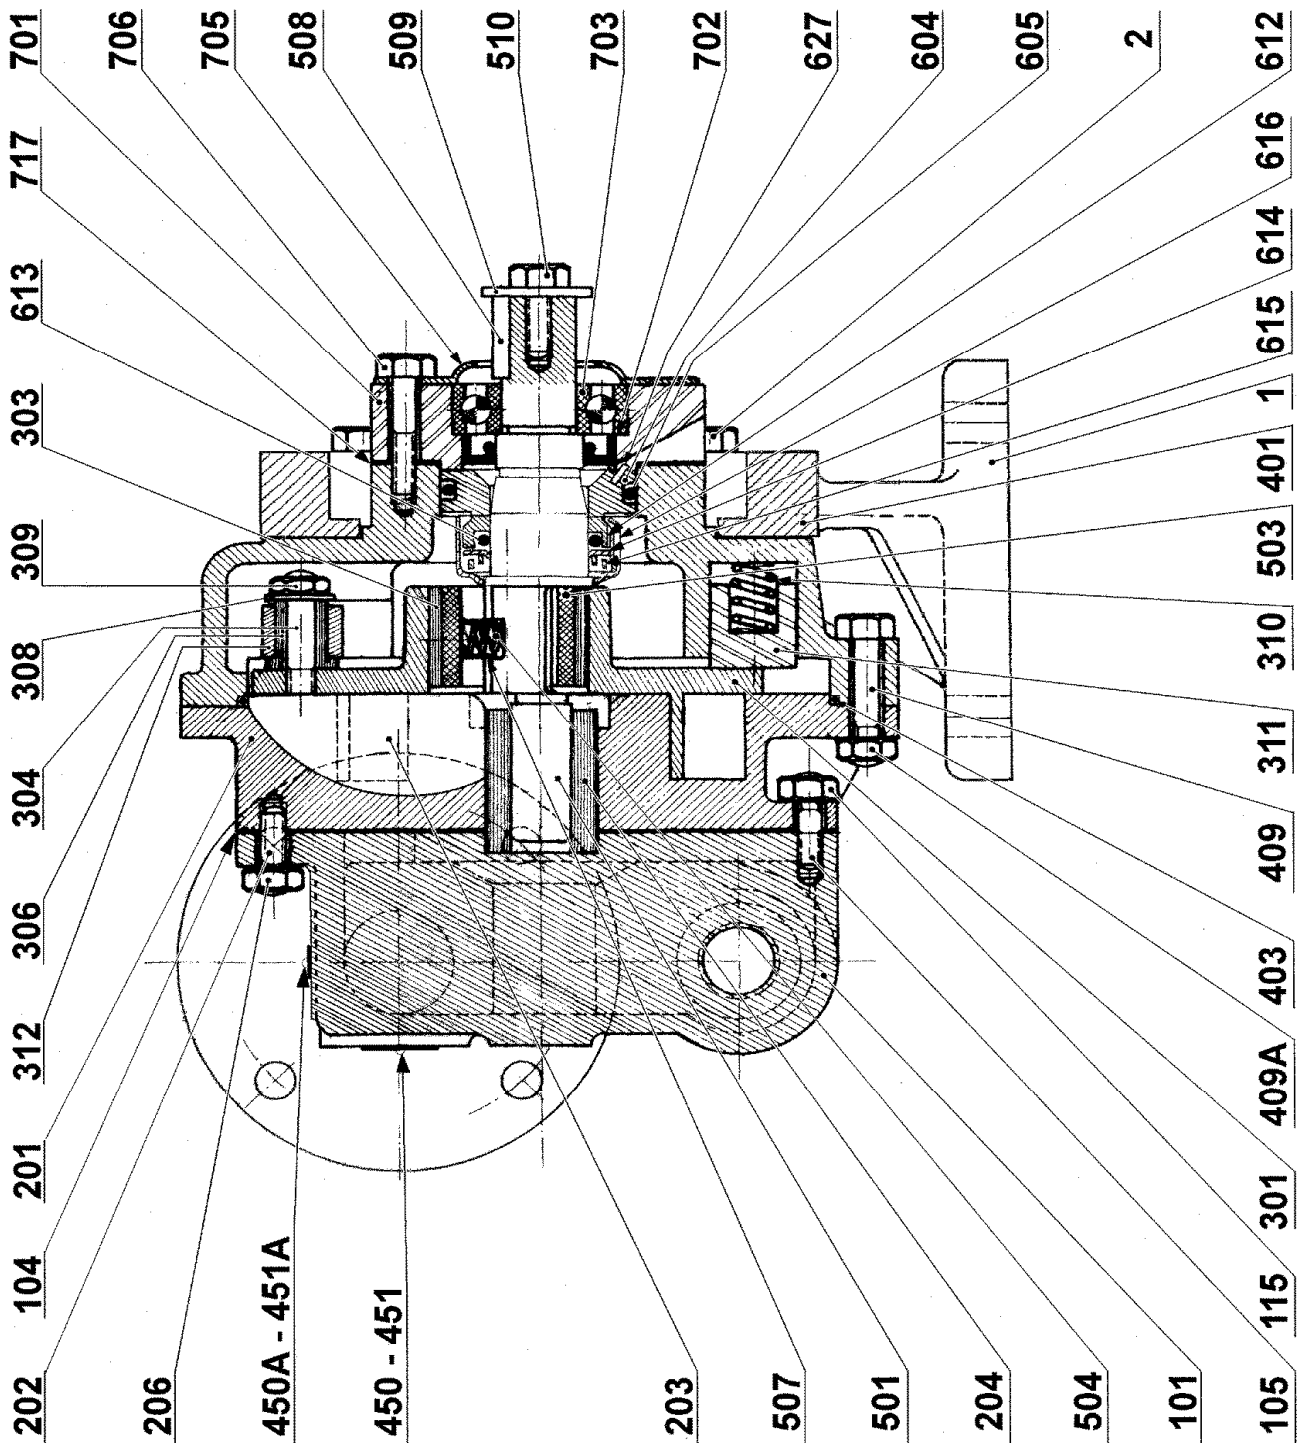

Mechanical seal

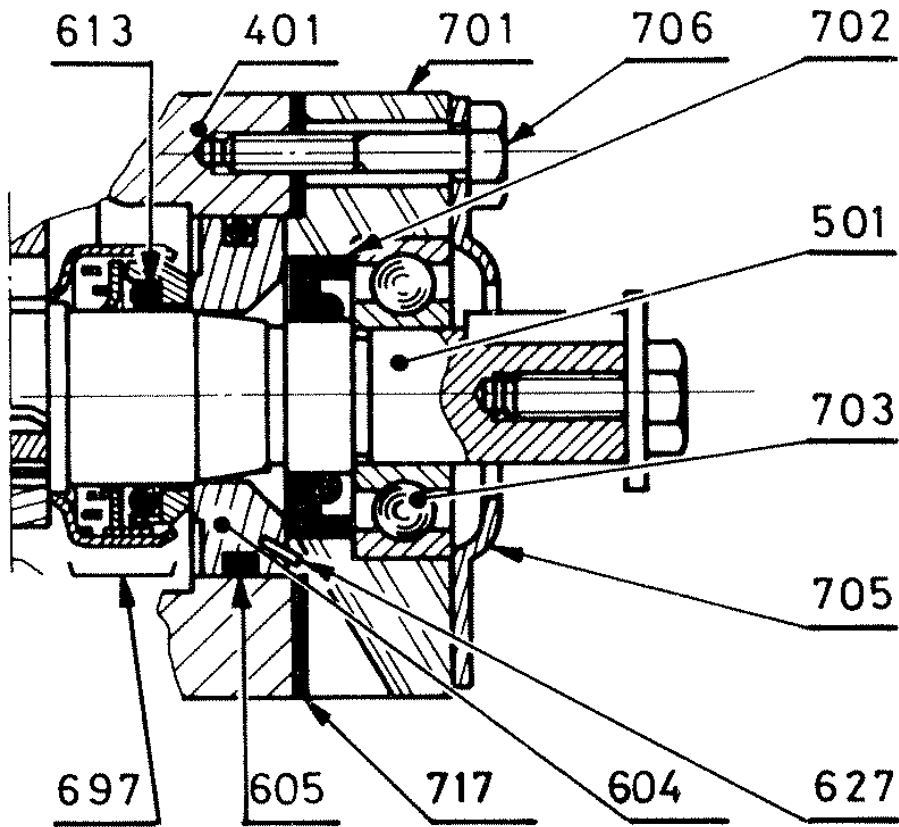

Bypass

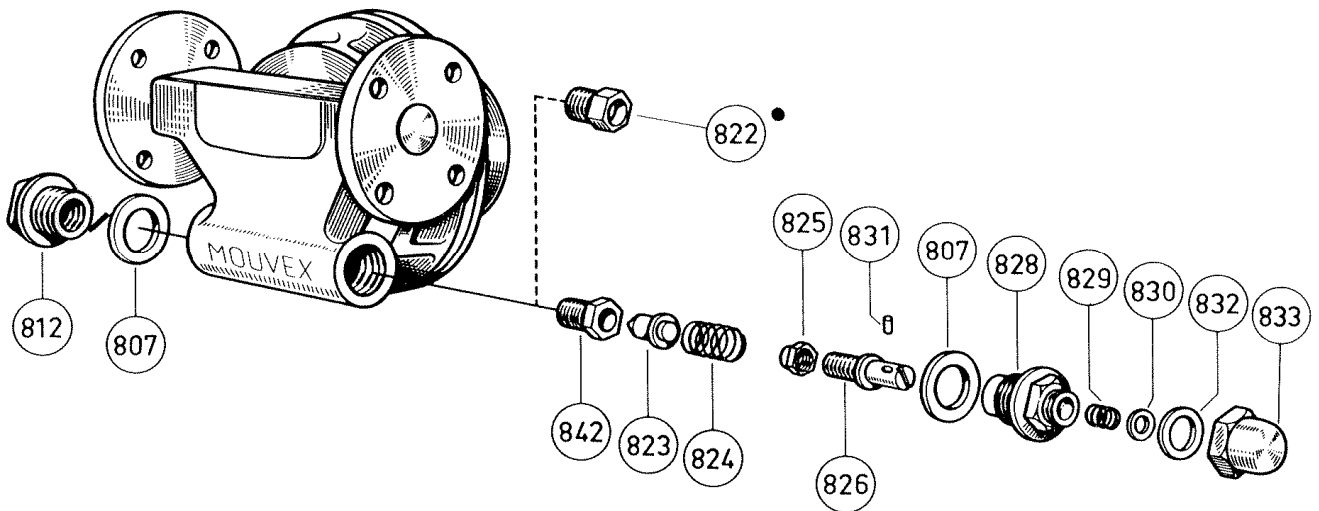

AG H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
98	◆	FULL SET OF SCREWS	1	AUX301309		
105		STUD	(5)			
115		NUT	(5)			
202		STUD	(1)			
206		NUT	(1)			
409		SCREW	(6)			
409A		NUT	(6)			
706		SCREW	(3)			
99	◆	FULL SET OF SEALS FKM	1	AUX301311	■	
104		SEAL	(1)			
403	◆	COMPLETE FRONT COVER SEAL	1	AUX200831		
100	◆	MAIN BODY, COMPLETE	1	AUX301290		
101		MAIN BODY	(1)			
105		STUD	(5)			
115		NUT	(5)			
200	◆	CYLINDER, COMPLETE	1	AUX301293	■	
201A		CYLINDER + BULKHEAD + BUSHING	(1)			
201		CYLINDER	(1)			●
203		BULKHEAD	(1)			
204	◆	BUSHING	1	AUX201305	■	●
202		STUD	(1)			
206		NUT	(1)			
300	◆	COMPLETE PISTON	1	AUX303002	■	●
3010		PISTON + BLOCK PIN	(1)			
303	◆	PISTON BUSHING	1	AUX201306	■	●
3980	◆	SLIDE BLOCK, COMPLETE	1	AUX305238		
306		BUSHING	(1)			
308		WASHER	(1)			
309		NUT	(1)			
312		SLIDE BLOCK	(1)			
400	◆	COMPLETE FRONT COVER	1	AUX301297		
399	◆	GUIDE BLOCK, COMPLETE	1	AUX301299		
310		SPRING	(3)			
311		BACK PISTON SUPPORT	(3)			●
401		FRONT COVER	(1)			
403	◆	COMPLETE FRONT COVER SEAL	1	AUX200831		
500	◆	SHAFT COMPLETE	1	AUX301301	■	
501	◆	SHAFT	1	AUX203480		
503	◆	PISTON BEARING	1	AUX203482		●
598	◆	BEARING SPRING COMPLETE	1	AUX301302		
504		SPRING	(1)			
507		BUSHING	(1)			
599	◆	COMPLETE KEY	1	AUX301303		
508	◆	KEY	1	AUX203849		
509		WASHER	(1)			
510		SCREW	(1)			
600	◆	MECHANICAL SEAL BLOCDIR LR VT	1	AUX301305	■	
610		STATIONARY SEAL FACE COMPLETE	(1)			
604		STATIONARY SEAL FACE	(1)			
605		SEAL	(1)			
627	◆	PIN	1	AUX200139		●
697		ROTATING PART	(1)			●
612		SEAL HOUSING	(1)			●
613		SEAL	(1)			
614		SPRING GUIDE	(1)			
615		SPRING	(1)			
616		CAGE	(1)			

AG H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
699	◆	SET OF MECHANICAL SEAL SEALS	1	AUX301313		
605		SEAL	(1)			
613		SEAL	(1)			
700	◆	BALL BEARINGS COMPLETE	1	AUX301308		
701		BEARING CAGE	(1)			
702		LIP SEAL	(1)			
703	◆	BALL BEARING	1	AUX200546		●
705		BEARING COVER	(1)			
717		GASKET	(1)			
840	◆	BYPASS COMPLETE	1	AUX301314		
812		PLUG	(1)			
824	◆	SPRING N°4	1	AUX201123		
833		BYPASS CAP	(1)			
861	◆	ADJUSTING VALVE SEAT	1	AUX301315		
823		COMPENSATED VALVE	(1)			
842		VALVE SEAT	(1)			
898	◆	SET ADJUSTING SCREW	1	AUX301316		
8260		ADJUSTING SCREW	(1)			
825		SPRING GUIDE	(1)			
826		ADJUSTING SCREW	(1)			
828		NUT	(1)			
829		SPRING	(1)			
830		WASHER	(1)			
831		PIN	(1)			
899	◆	SET OF BYPASS SEALS	1	AUX301317	■	
807		SEAL	(2)			
832		SEAL	(1)			