

 
PARTS LIST
PUMP
AF TM H

Keep this parts lists with Installation, Operation and Maintenance Instructions.


To order the required spare parts, indicate the desired Reference(s).

- ◆ Sets of parts or parts available to order.


AF TM H

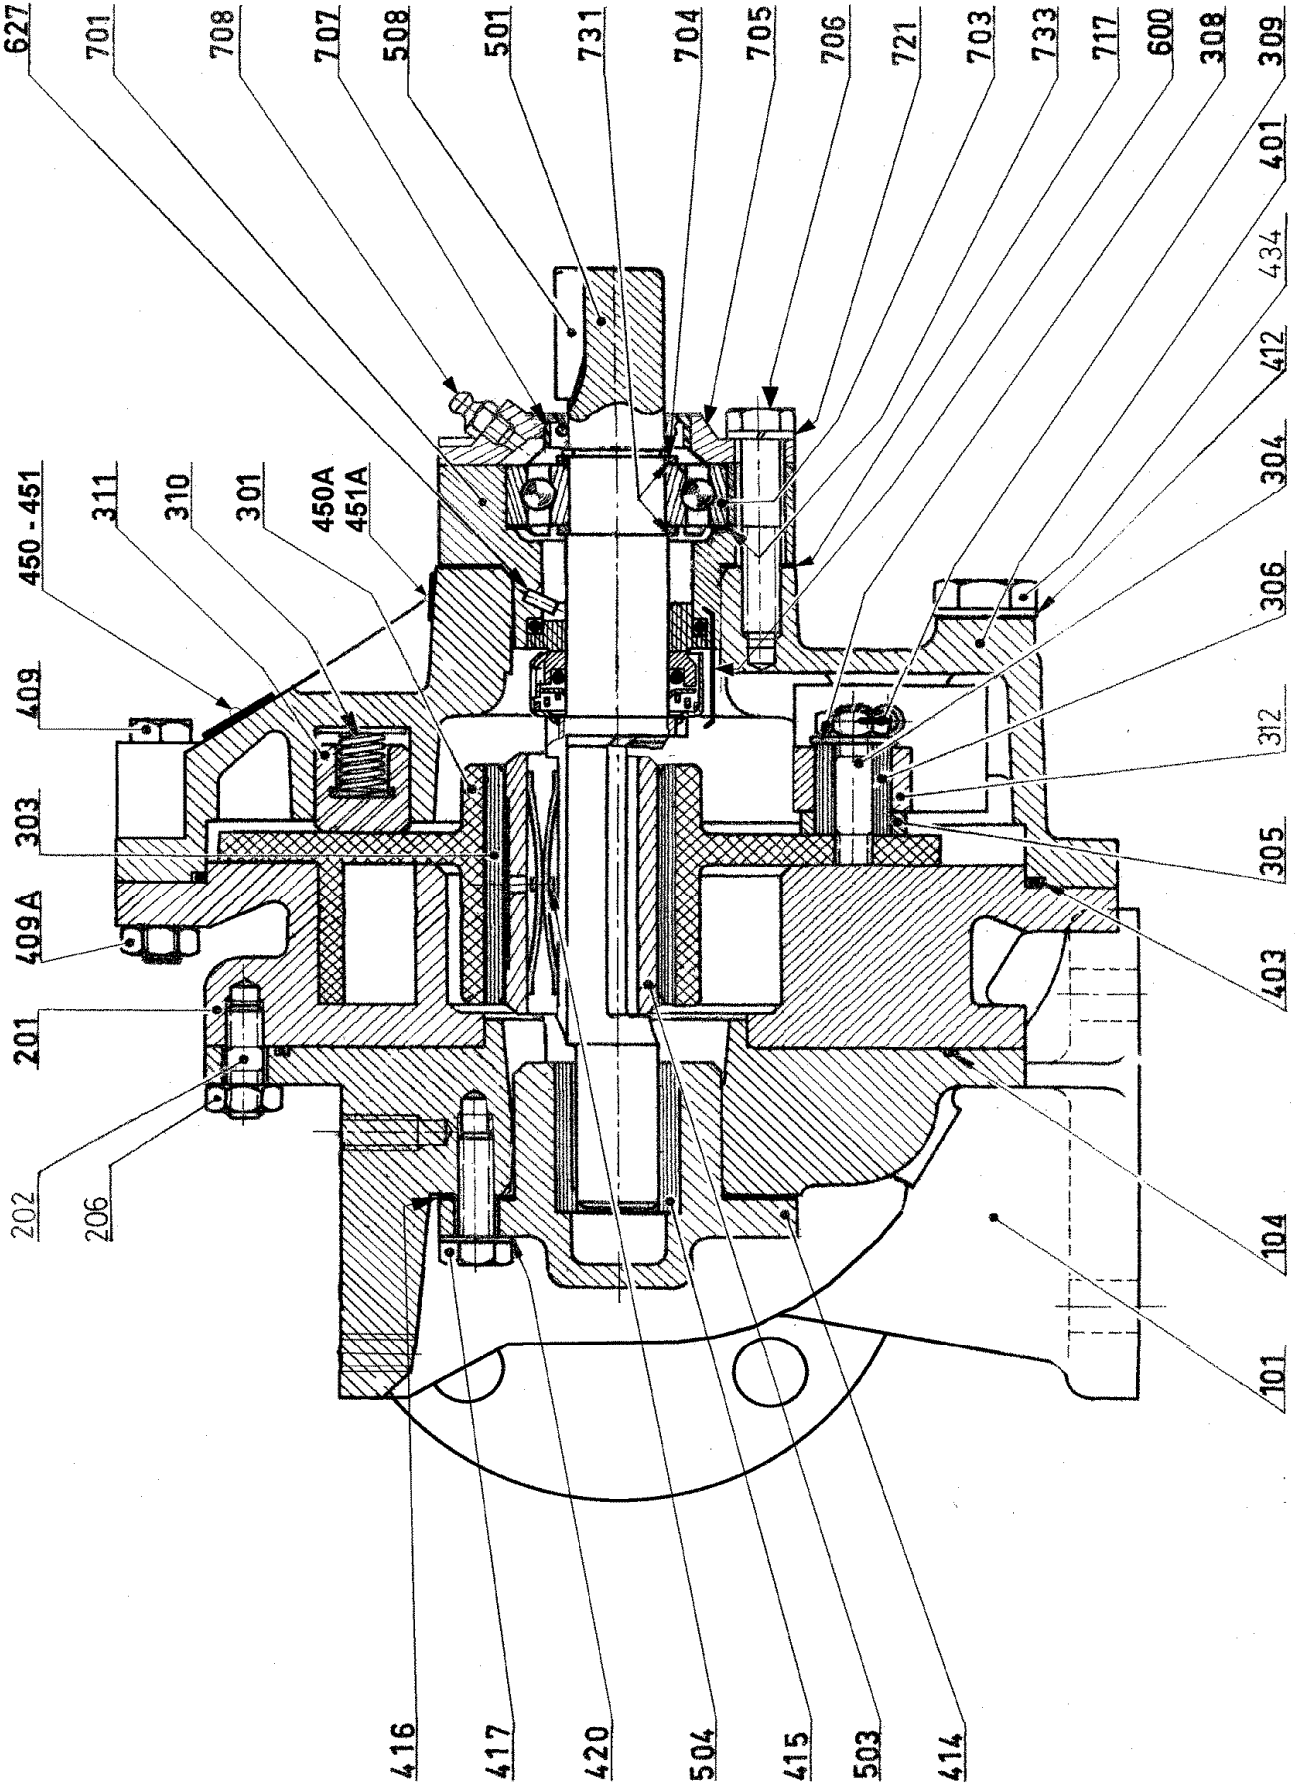

Mechanical seal

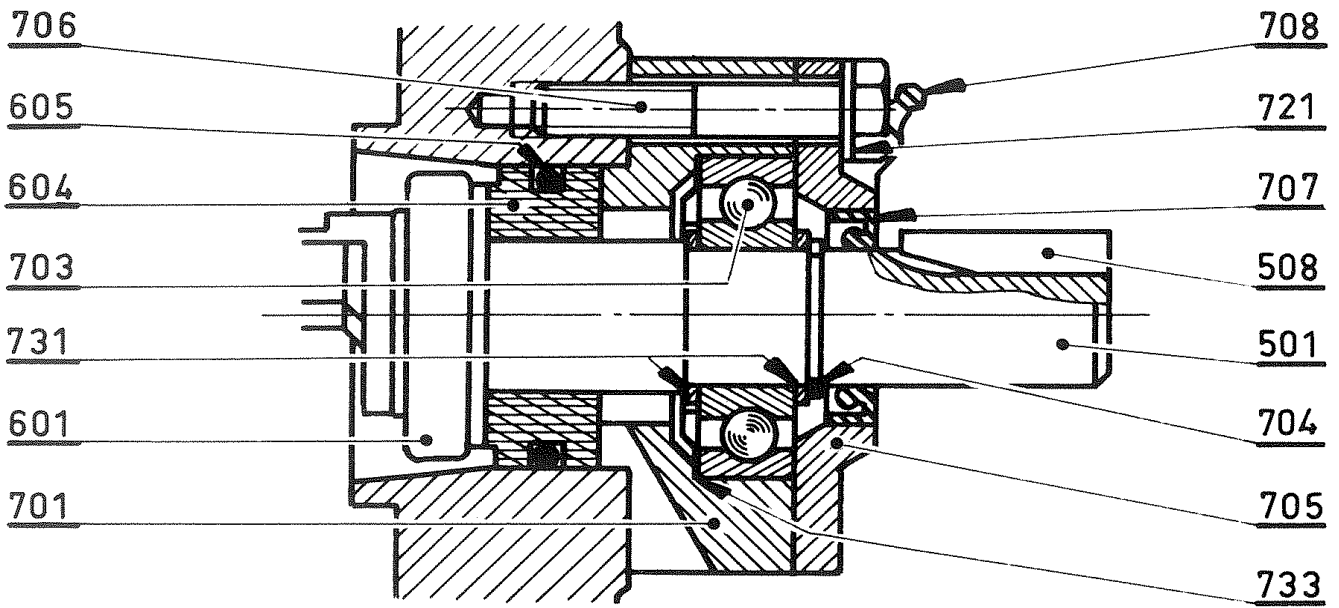 

Bypass

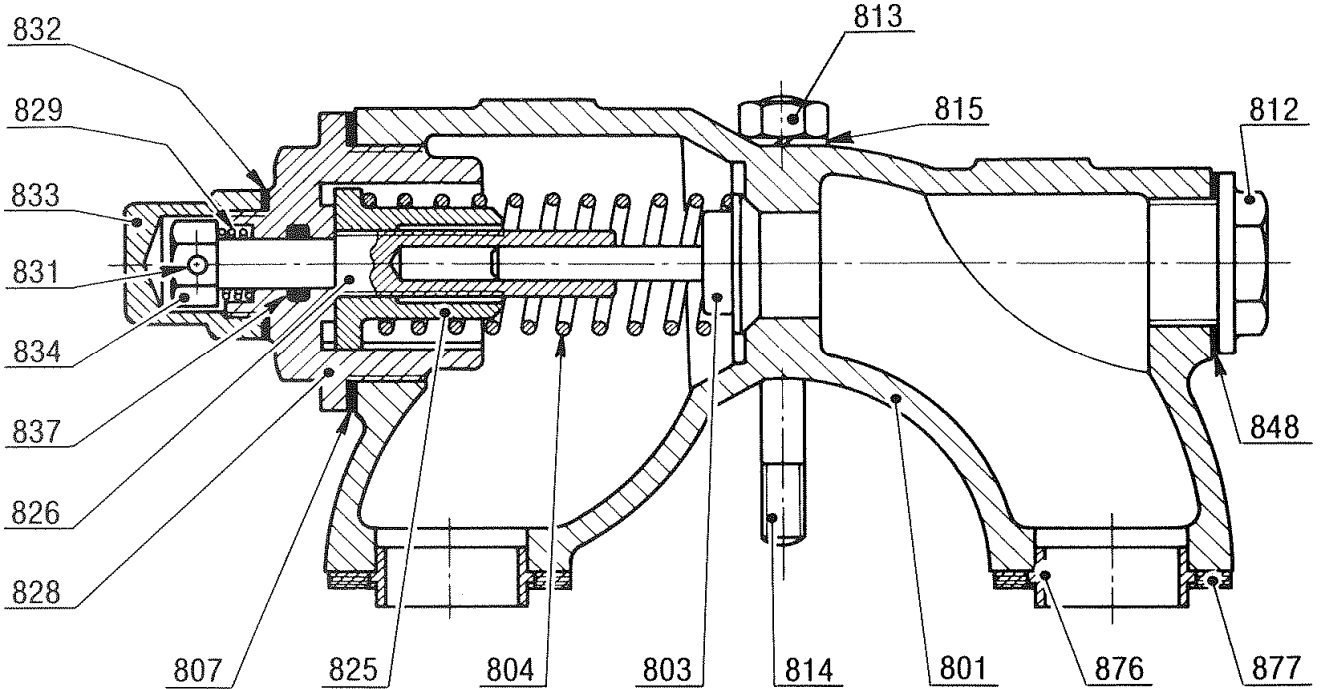 

AF TM H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
98	◆	FULL SET OF SCREWS	1	AUX301332		
202		STUD	(8)			
206		NUT	(8)			
409		SCREW	(6)			
409A		NUT	(6)			
417		SCREW	(4)			
420		WASHER	(4)			
706		SCREW	(4)			
721		WASHER	(4)			
99	◆	SET OF PUMP SEALS	1	AUX301339	■	
104		SEAL	(1)			
403	◆	SEAL	1	AUX200834		
406		SEAL	(2)			
416		SEAL	(1)			
100	◆	MAIN BODY, COMPLETE	1	AUX300445		
101		MAIN BODY	(1)			
817	◆	SET OF BYPASS FIXING STUDS	1	AUX300447		
813		NUT	(2)			
814		STUD	(2)			
815		WASHER	(2)			
200	◆	CYLINDER, COMPLETE	1	AUX300448	■	
201		CYLINDER	(1)			●
202		STUD	(8)			
206		NUT	(8)			
300	◆	COMPLETE PISTON	1	AUX301337	■	●
3010		PISTON + BLOCK PIN	(1)			
303	◆	PISTON BUSHING	1	AUX201366	■	●
3980	◆	SLIDE BLOCK, COMPLETE	1	AUX305218		
305		ABUTMENT	(1)			
307	◆	SLIDE BLOCK + BUSHING	1	AUX300459		
306		BUSHING	(1)			
312		SLIDE BLOCK	(1)			
308		WASHER	(1)			
309		PISTON NUT	(1)			
399	◆	GUIDE BLOCK, COMPLETE	1	AUX300462		
310		SPRING	(3)			
311		BACK PISTON SUPPORT	(3)			●
400	◆	COMPLETE FRONT COVER	1	AUX300484		
401		FRONT COVER	(1)			
402	◆	FRONT BUSHING SET	1	AUX300486		
404		GUIDE	(2)			●
405		STUD	(2)			
406		SEAL	(2)			
407		WASHER	(2)			
408		NUT	(2)			
411	◆	FRONT COVER DRAIN PLUG + SEAL	1	AUX300036		
412		SEAL	(1)			
434		PLUG	(1)			
403	◆	SEAL	1	AUX200834		
413	◆	FRONT COVER BEARING COMPLETE	1	AUX301327		
414		FRONT COVER BEARING	(1)			
415	◆	BEARING BUSHING	1	AUX201390	■	●
416		SEAL	(1)			
417		SCREW	(4)			
420		WASHER	(4)			

AF TM H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
500	◆	SHAFT BLOCDIR COMPLETE	1	AUX301338	■	
501	◆	SHAFT	1	AUX204235		
503	◆	PISTON BEARING	1	AUX203509		●
504		SPRING	(1)			
508	◆	KEY	1	AUX204523		
600	◆	MECHANICAL SEAL BLOCDIR LR VT	1	AUX300387	■	
610		STATIONARY SEAL FACE COMPLETE	(1)			
604		STATIONARY SEAL FACE	(1)			
605		SEAL	(1)			
697		ROTATING PART	(1)			●
612		SEAL HOUSING	(1)			●
613		SEAL	(1)			
614		SPRING GUIDE	(1)			
615		SPRING	(1)			
616		CAGE	(1)			
699	◆	SET OF MECHANICAL SEAL SEALS	1	AUX300513		
605		SEAL	(1)			
613		SEAL	(1)			
704		RING	(1)			
700	◆	BALL BEARINGS COMPLETE	1	AUX311565		
627	◆	PIN	1	AUX200139		
701		BEARING CAGE	(1)			
703	◆	BALL BEARING	1	AUX212314		●
705		BEARING COVER	(1)			
706		SCREW	(4)			
708		GREASE NIPPLE	(1)			
721		WASHER	(4)			
797	◆	BALL BEARING WASHERS AND GASKET SET	1	AUX300505		
704		RING	(1)			
707		LIP SEAL	(1)			
717		SEAL	(1)			
731		WASHER	(2)			
733		METALLIC SEAL	(1)			
800	◆	BYPASS COMPLETE	1	AUX302507		
804	◆	SPRING	1	AUX201179		
860	◆	BYPASS BODY COMPLETE	1	AUX300535		
801		BYPASS BODY	(1)			
812		PLUG	(1)			
848		SEAL	(1)			
869	◆	BYPASS CAP AND GASKET	1	AUX300541		
832		SEAL	(1)			
833		BYPASS CAP	(1)			
878	◆	CENTERING SET	1	AUX300539		
876		CENTERING PIECE	(2)			
877		CENTERING GASKET	(2)			
898	◆	SET ADJUSTING SCREW	1	AUX306922		
803		VALVE + STEM	(1)			
807		SEAL	(1)			
825		SPRING GUIDE	(1)			
826		ADJUSTING SCREW	(1)			
828		NUT	(1)			
829		SPRING	(1)			
831		PIN	(1)			
834		NUT	(1)			
837		SEAL	(1)			

AF TM H

* 1, 2, 4... : Quantity in equipment - (1), (2), (4)... : Quantity in kit

Item	Available	Description	Qty*	Ref.	Maintenance kit	Wear part
899	◆	SET OF BYPASS SEALS	1	AUX303248	■	
807		SEAL	(1)			
829		SPRING	(1)			
831		PIN	(1)			
832		SEAL	(1)			
837		SEAL	(1)			
846		SEAL	(1)			
848		SEAL	(1)			
877		CENTERING GASKET	(2)			