


BLACKMER
HOSE and NOZZLE KIT
INSTALLATION INSTRUCTION

960600
Page 1 of 1

FORM
336

Effective Oct. 2002

Also replaces Form 527 (pn 960615)

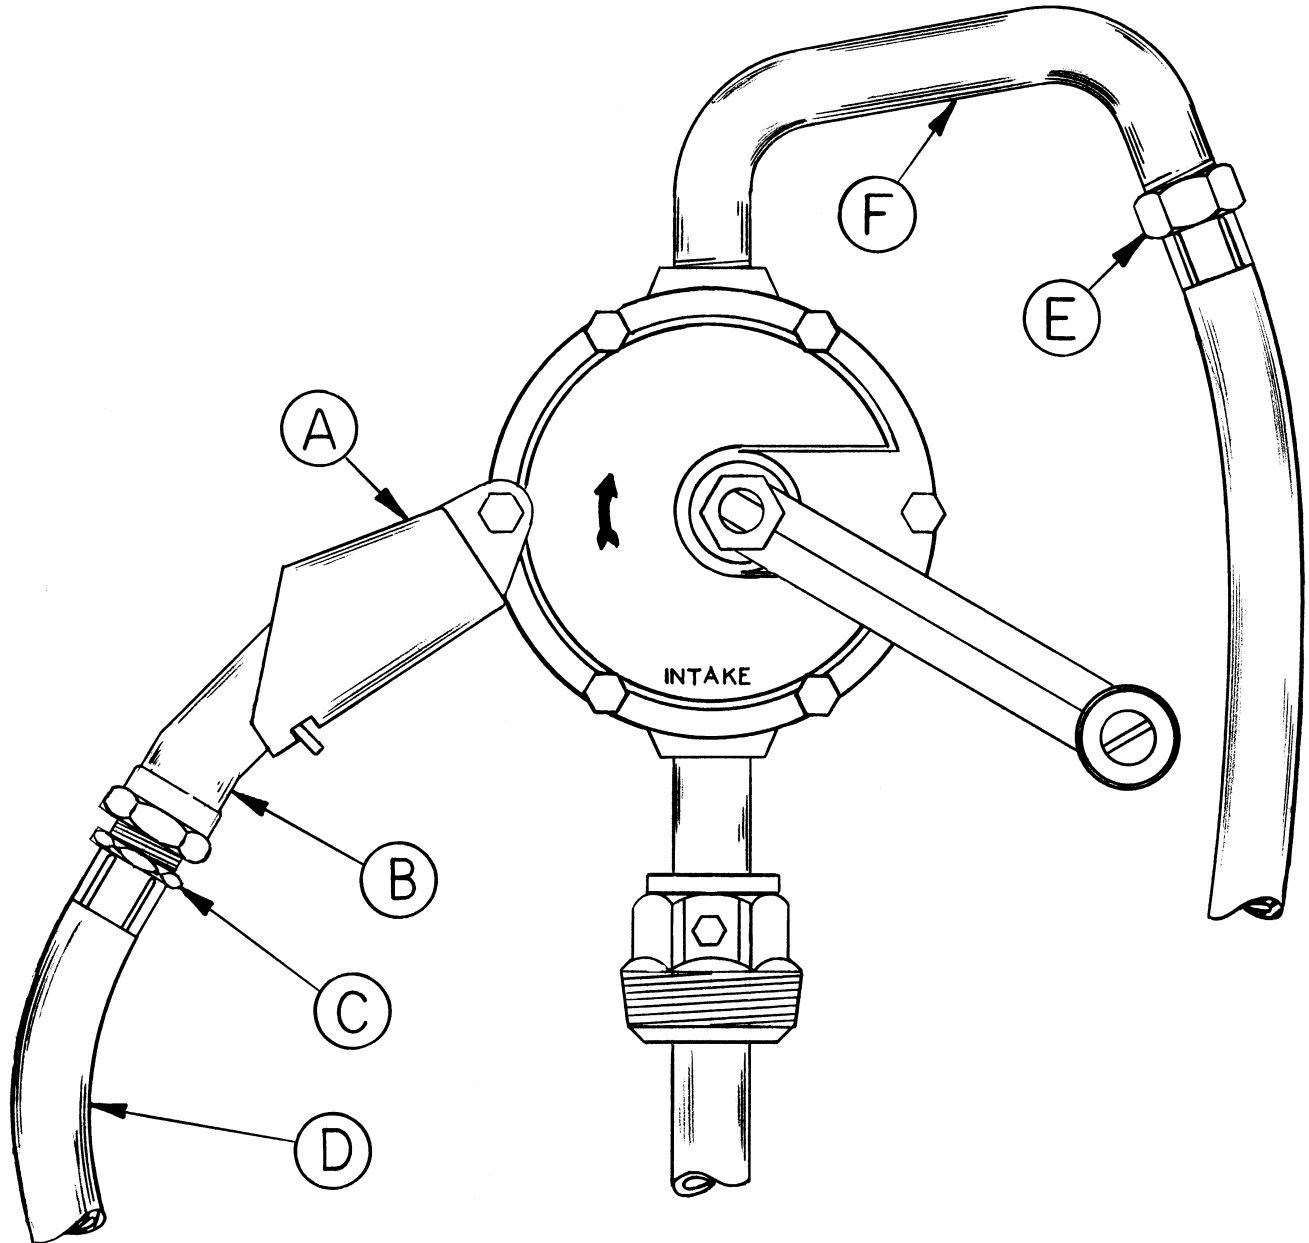

- Step 1: Attach nozzle holder "A" to pump in position as shown with enclosed cap screw.
- Step 2: Attach nozzle "B" to male coupled end of "C" of hose.
- Step 3: Attach female coupled end "E" of hose to pump spout "F".



1809 Century Avenue, Grand Rapids, Michigan 49503-1530, U.S.A.
Telephone: (616) 241-1611 / Fax: (616) 241-3752
E-Mail: blackmer@blackmer.com / Internet: www.blackmer.com

Form 336
Page 1 of 1