
## IOM INSTALLATION OPERATION & MAINTENANCE

## A075

### METAL 3/4 INCH AIR-OPERATED DOUBLE-DIAPHRAGM PUMP





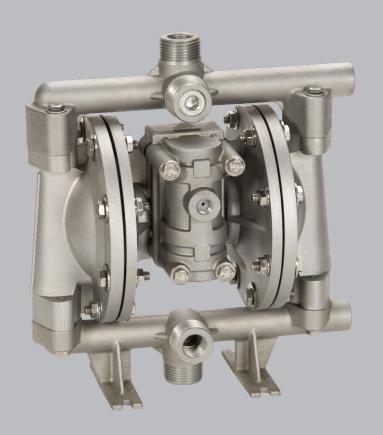





# TABLE OF CONTENTS

| SECTION 1  | WARNINGS, DANGERS AND CAUTIONS         | 3       |
|------------|--|---------|
| SECTION 2  | MODEL DESIGNATION MATRIX & REPAIR KITS | 4-5     |
| SECTION 3  | PRINCIPLES OF OPERATION                | 6       |
| SECTION 4  | DIMENSIONAL DRAWINGS                   | 7-8     |
| SECTION 5  | PERFORMANCE CURVES                     |         |
|            | RUBBER DIAPHRAGMS                      |         |
|            | TPE DIAPHRAGMS                         | 9       |
|            | PTFE DIAPHRAGMS                        | 9       |
| SECTION 6  | INSTALLATION, TROUBLESHOOTING AND MAIN | ΓENANCE |
|            | INSTALLATION                           | 10-11   |
|            | TROUBLESHOOTING                        | 12      |
|            | OPERATION                              | 13      |
|            | MAINTENANCE                            | 13      |
| SECTION 7  | REPAIR AND ASSEMBLY                    |         |
|            | PUMP WET END REMOVAL                   | 14-15   |
|            | AIR VALVE REMOVAL                      | 16-17   |
|            | PILOT VALVE REMOVAL                    | 18-19   |
|            | TORQUE SPECIFICATIONS                  | 19      |
| SECTION 8  | EXPLODED VIEWS AND PARTS LISTS         | 20-25   |
| SECTION 9  | ELASTOMERS                             | 26      |
| SECTION 10 | WARRANTY AND REGISTRATION              | 27      |
|            |  |         |



## CAUTIONS — READ FIRST!

READ THESE WARNINGS AND SAFETY PRECAUTIONS PRIOR TO INSTALLATION OR OPERATION. FAILURE TO COMPLY WITH THESE INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND OR PROPERTY DAMAGE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

**CAUTION** Always wear safety glasses when operating a pump to avoid eye injury. If diaphragm rupture occurs, material being pumped may be forced out of the air exhaust.

**CAUTION** Do not connect a compressed air source to the exhaust port of the pump.

**CAUTION** Do not lubricate air supply.

air-inlet pressure.

**CAUTION** Do not exceed 120 psig (8.3 bar)

**CAUTION** Do not exceed 10 psig (0.7 bar) or 23 ft-H<sub>2</sub>0 suction pressure.

CAUTION The temperature of the process fluid and air input must be no more than the maximum temperature allowed for the appropriate non-metallic material. See the list of temperatures below for each material's maximum recommended temperature:

| Buna-N (Nitrile): | 10°F to 180°F (-12°C to 82°C)   |
|-------------------|---------------------------------|
| Geolast®:         | 10°F to 180°F (-12°C to 82°C)   |
| EPDM:             | -40°F to 280°F (-40°C to 138°C) |
| FKM:              | -40°F to 350°F (-40°C to 177°C) |
| Hytrel®:          | -20°F to 220°F (-29°C to 104°C) |
| Nylon:            | 0°F to 200°F (-18°C to 93°C)    |
| PTFE:             | 40°F to 220°F (4°C to 104°C)    |
| Polyethylene:     | 32°F to 158°F (0°C to 70°C)     |
| Polypropylene:    | 32°F to 180°F (0°C to 82°C)     |
| Polyurethane:     | 10°F to 150°F (-12°C to 66°C)   |
| PVDF:             | 0°F to 250°F (-18°C to 121°C)   |
| Santoprene®:      | -40°F to 225°F (-40°C to 107°C) |
| Urethane:         | -65°F to 220°F (-54°C to 104°C) |

Temperature limits are solely based upon mechanical stress and certain chemicals will reduce the maximum operating temperature. The allowable temperature range for the process fluid is determined by the materials in contact with the fluid being pumped. Consult a chemical resistance guide for chemical compatibility and a more precise safe temperature limit. Always use minimum air pressure when pumping at elevated temperatures.

**ON** It is the end user's responsibility to maintain the process fluid's temperature during use.

• CAUTION Ensure all wetted components are chemically compatible with the process fluid and the cleaning fluid.

• WARNING = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage

**CAUTION** = Hazards or unsafe practices which could result in minor personal injury, product or property damage.

**WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

WARNING Maintenance must not be performed when a hazardous atmosphere is present.

damage prior to use.

**CAUTION** The equipment must be inspected for visible

**CAUTION** Ensure pump is thoroughly cleaned and flushed prior to installation into a process line.

**CAUTION** Blow out all compressed air lines in order to remove any debris, prior to pump installation. Ensure that the muffler is properly installed prior to pump operation.

**CAUTION** Ensure air exhaust is piped to atmosphere prior to a submerged installation.

prior to operation.

**CAUTION** Ensure all hardware is set to correct torque values

NARNING Pump, valves and all containers must be properly grounded prior to handling flammable fluids and/or whenever static electricity is a hazard.

WARNING The Safety Supplement document is a part of the manual. Please refer to the Safety Supplement document for a complete list of safety considerations including considerations for safe operation and maintenance of pumps marked for ATEX environments before starting the pump.

**WARNING** This product can expose you to chemicals including Nickel, Chromium, Cadmium, or Cobalt, which are known to the State of California to cause cancer and/or birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.




#### MODEL DESIGNATION MATRIX & REPAIR KITS - ALUMINUM



<sup>\*</sup> Solenoid Adaptor Valves only available on select pump models with polypropylene intermediate

#### MODEL DESIGNATION MATRIX & REPAIR KITS - STAINLESS STEEL

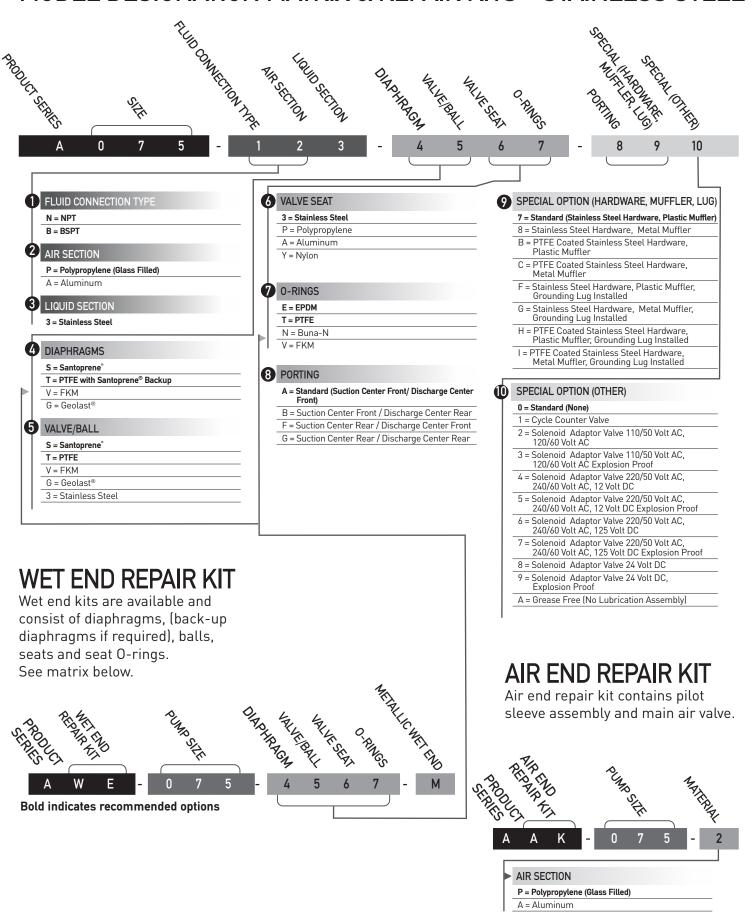


<sup>\*</sup> Solenoid Adaptor Valves only available on select pump models with polypropylene intermediate



## PRINCIPLES OF OPERATION


## HOW AN AIR OPERATED DOUBLE DIAPHRAGM PUMP WORKS

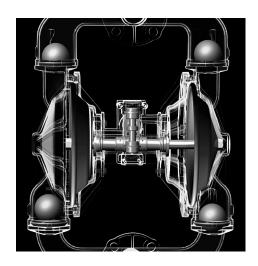

The air-valve directs pressurized air behind the diaphragm on the right, causing the diaphragm on the right to move outward (to the right).

Since both the right diaphragm and the left diaphragm are connected via a diaphragm rod, when the right diaphragm moves to the right, the left diaphragm (through the action of the diaphragm rod) moves to the right also.

When the diaphragm on the left side is moving to the right, it is referred to as suction stroke. When the left diaphragm is in its suction stroke, the left suction ball moves upward (opens) and the left discharge ball moves downward (closes). This action creates suction and draws liquid into the left side chamber.

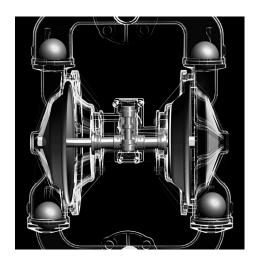

The air-valve directs pressurized air behind the left diaphragm, causing the left diaphragm to move outward (to the left).

Since both the left diaphragm and the right diaphragm are connected via a diaphragm rod, when the left diaphragm moves to the left, the right diaphragm (through the action of the diaphragm rod) moves to the left also.

When the diaphragm on the left side moves outward, the left discharge ball moves upward (opens) and the left suction ball moves downward (closes). This causes the liquid to leave the left side liquid outlet of the pump.


Simultaneously, the right diaphragm moves inward (to the left), which causes the right suction ball to open and the right discharge to close, which in turn causes suction, drawing liquid into the right chamber.

The process of alternating right suction / left discharge (and vice-versa) continues as long as compressed air is supplied to the pump.



## 3/4" PUMP DIMENSIONS


### **ALUMINUM CENTER SECTION**

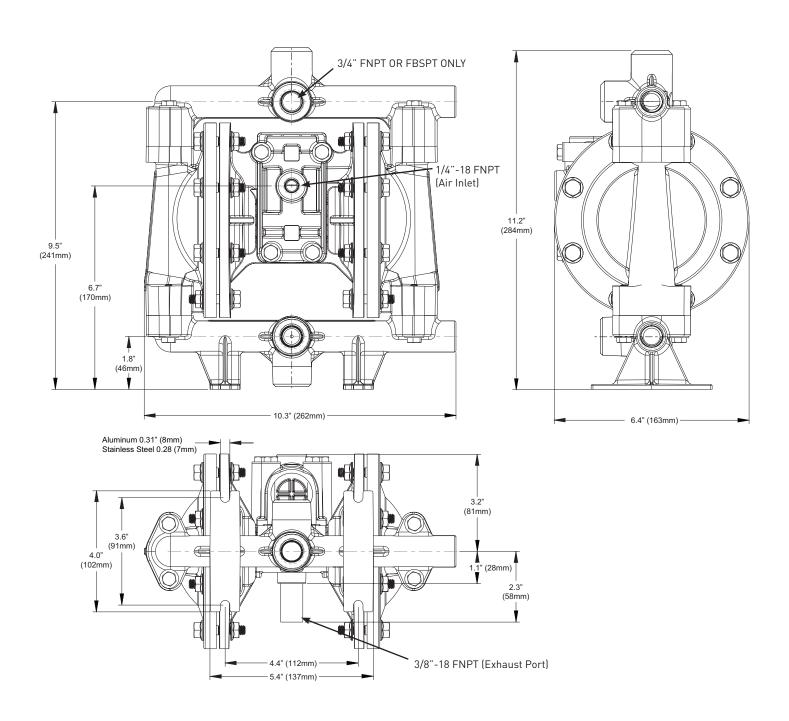

Note - Suction Center Front / Discharge Center Front are default ports. See part number matrix option code for additional porting options.

## 3/4" PUMP DIMENSIONS


### POLYPROPYLENE CENTER SECTION

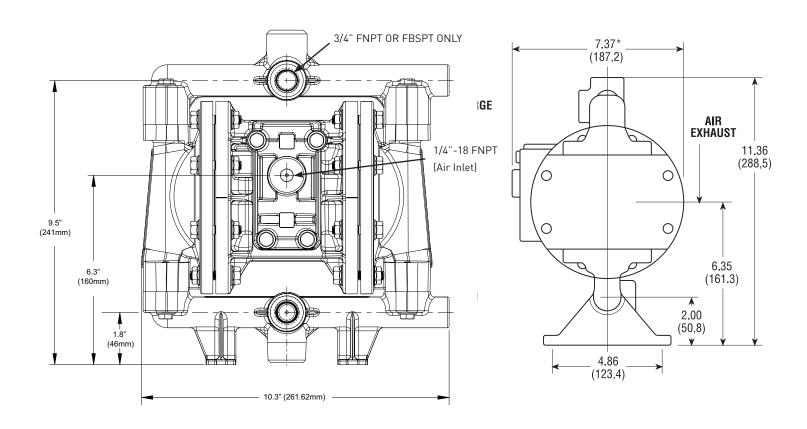


Note - Suction Center Front / Discharge Center Front are default ports. See part number matrix option code for additional porting options.



## PERFORMANCE CURVES

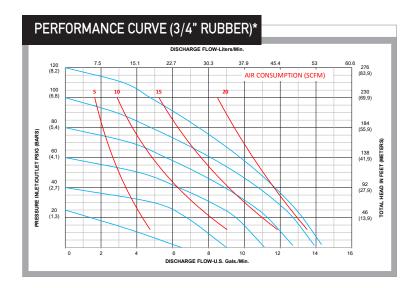

| Performance Spec    | fications   |
|---------------------|---|
| Max. Flow:          | 14 gpm (53.0 lpm)                                   |
| Max. Air Pressure   | : 120 psi (8.3 bar)                                 |
| Max. Solids:        | <sup>1</sup> / <sub>8</sub> " (3.2 mm)              |
| Max. Suction Lift D | ry: 15 ft-H <sub>2</sub> 0 (4.5 m-H <sub>2</sub> 0) |
| Max. Suction Lift W | et: 31 ft-H <sub>2</sub> 0 (9.4 m-H <sub>2</sub> 0) |
| Weight: Al          | 10 lbs (4.5 kg)/SS-20 lbs (9.1 kg)                  |
| Air Inlet:          | 1/4" FNPT   |
| Liquid Inlet:       | 3/4" FNPT/BSPT                                      |
| Liquid Outlet:      | 3/4" FNPT/BSPT                                      |
| Height:             | 11.2" (284 mm)                                      |
| Width:              | 10.3" (262 mm)                                      |
| Depth:              | 6.4" (163 mm)**                                     |

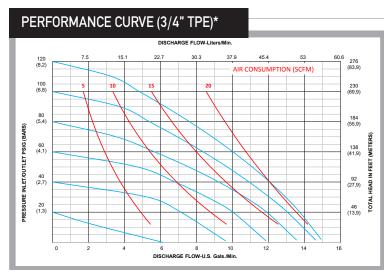

| Performance Specific  | cations   |
|-----------------------|---|
| Max. Flow:            | 15 gpm (56.8 lpm)                                 |
| Max. Air Pressure:    | 120 psi (8.3 bar)                                 |
| Max. Solids:          | <sup>1</sup> / <sub>8</sub> " (3.2 mm)            |
| Max. Suction Lift Dry | : 15 ft-H <sub>2</sub> 0 (4.5 m-H <sub>2</sub> 0) |
| Max. Suction Lift Wet | : 31 ft-H <sub>2</sub> 0 (9.4 m-H <sub>2</sub> 0) |
| Weight: AL-           | 10 lbs (4.5 kg)/SS-20 lbs (9.1 kg)                |
| Air Inlet:            | 1/4" FNPT   |
| Liquid Inlet:         | 3/4" FNPT/BSPT                                    |
| Liquid Outlet:        | 3/4" FNPT/BSPT                                    |
| Height:               | 11.2" (284 mm)                                    |
| Width:                | 10.3" (262 mm)                                    |
| Depth:                | 6.4" (163 mm)**                                   |

| PERFORMANCE CURVE (3/4" PTFE)*    |              |      |      |               |                       |              |            |                              |
|-----------------------------------|--------------|------|------|---------------|-----------------------|--------------|------------|------------------------------|
|                                   |              |      |      | DISCHARGE FI  | LOW-Liters/Min.       |              |            |                              |
|                                   | 120          | 7.5  | 15.1 | 22.7          | 30.3                  | 37.9         | 45.4       | 53 276                       |
|                                   | (8,2)        |      |      |               | -                     | AIR CONSUMPT | ION (SCFM) | (83,9)                       |
|                                   | 100<br>(6,8) | 5 10 | 15   | 20            |                       |              |            | 230 (69,9)                   |
|                                   |              |      |      |               |                       |              |            | (00,0)                       |
|                                   | 80<br>(5,4)  |      | 1    |               |                       |              |            | 184                          |
| (ARS)                             | (=, -,       |      |      |               |                       |              |            | (55,9)                       |
| PRESSURE INLET/OUTLET PSIG (BARS) | 60<br>(4,1)  |      |      |               |                       |              |            | 138 L<br>(41,9) W            |
| Ē                                 | .,,          |      |      |               |                       |              |            | (41,9) W                     |
| T/OU                              | 40<br>(2,7)  |      |      |               |                       |              |            | 92 2                         |
| N N                               | (2,1)        |      |      |               |                       |              |            | (27,9)                       |
| SSURI                             | 20<br>(1,3)  |      |      |               |                       |              |            | 92<br>(27,9) H HAD 146<br>46 |
| PR.                               | (1,0)        |      |      |               |                       |              |            | (13,9)                       |
|                                   |              |      |      |               |                       |              |            |                              |
|                                   |              | 0 2  | 4    | 6             | 8<br>W-U.S. Gals./Min | 10           | 12         | 14                           |
|                                   |              |      |      | DISCHARGE FLO | w-u.s. Gals./Min      | i.           |            |                              |

| Performance S  | Specifications | S   |
|----------------|----------------|---|
| Max. Flow:     |                | 13 gpm (49.2 lpm)                               |
| Max. Air Pres  | sure:          | 120 psi (8.3 bar)                               |
| Max. Solids:   |                | <sup>1</sup> / <sub>8</sub> " (3.2 mm)          |
| Max. Suction L | ift Dry:       | 14 ft-H <sub>2</sub> 0 (4.3 m-H <sub>2</sub> 0) |
| Max. Suction L | ift Wet:       | 31 ft-H <sub>2</sub> 0 (9.4 m-H <sub>2</sub> 0) |
| Weight:        | AL-10 lbs      | (4.5 kg)/SS-20 lbs (9.1 kg)                     |
| Air Inlet:     |                | 1/4" FNPT                                       |
| Liquid Inlet:  |                | 3/4" FNPT/BSPT                                  |
| Liquid Outlet: |                | 3/4" FNPT/BSPT                                  |
| Height:        |                | 11.2" (284 mm)                                  |
| Width:         |                | 10.3" (262 mm)                                  |
| Depth:         |                | 6.4" (163 mm)**                                 |

<sup>\*</sup>Flow rates indicated on all three charts shown were determined by pumping water at flooded suction, using an aluminum intermediate fitted pump. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve. \*\*Polypropylene intermediate is 7.3" (185mm) deep.



# INSTALLATION, TROUBLESHOOTING AND MAINTENANCE

## INSTALLATION PIPING

Whenever possible ensure the pump is installed using the shortest possible pipe lengths with the minimum amount of pipe fittings. Ensure all piping is supported independent of the pump.

Suction and discharge piping should not be smaller than the connection size of the pump. When pumping liquids of high viscosity, larger piping may be used, in order to reduce frictional pipe loss.

Employ flexible hoses in order to eliminate the vibration caused by the pump. Mounting feet can also be used to reduce vibration effects.

All hoses should be reinforced, non-collapsible and be capable of high vacuum service. Ensure that all piping and hoses are chemically compatible with the process and cleaning fluid.

For processes where pulsation effects should be reduced, employ a pulsation dampener on the discharge side of the pump.

For self-priming applications, ensure all connections are airtight and the application is within the pumps dry-lift capability. Refer to product specifications for further details.

For flooded suction applications, install a gate valve on the suction piping in order to facilitate service.

For unattended flooded suction operation, it is recommended to pipe the exhaust air above the liquid source. In the event of a diaphragm failure this will reduce or eliminate the possibility of liquid discharging through the exhaust onto the ground.

#### LOCATION

Ensure that the pump is installed in an accessible location, in order to facilitate future service and maintenance.

#### **AIR**

Ensure that the air supply is sufficient for the volume of air required by the pump. Refer to product specifications for further details. For reliable operation, install a 5 micron air filter, air-valve and pressure regulator. Do not exceed the pumps maximum operating pressure of 120 psig.

#### REMOTE OPERATION

Utilize a three way solenoid valve for remote operation. This ensures that air between the solenoid and the pump is allowed to "bleed off," ensuring reliable operation. Liquid transfer volume is estimated by multiplying displacement per stroke times the number of strokes per minute.

#### **NOISE**

Correct installation of the muffler reduces sound levels. Refer to product specifications for further details.

#### SUBMERGED OPERATION


For submersible operation, pipe the air exhaust to atmosphere.

#### **GROUNDING THE PUMP**

Loosen grounding screw and install a grounding wire. Tighten grounding screw. Wire size should be a 12 gauge wire or larger. Connect the other end of the wire to a true earth ground. Equipment must be grounded to achieve ATEX rating and it is recommended to configure the pump with a grounding lug option.



### SUGGESTED INSTALLATION

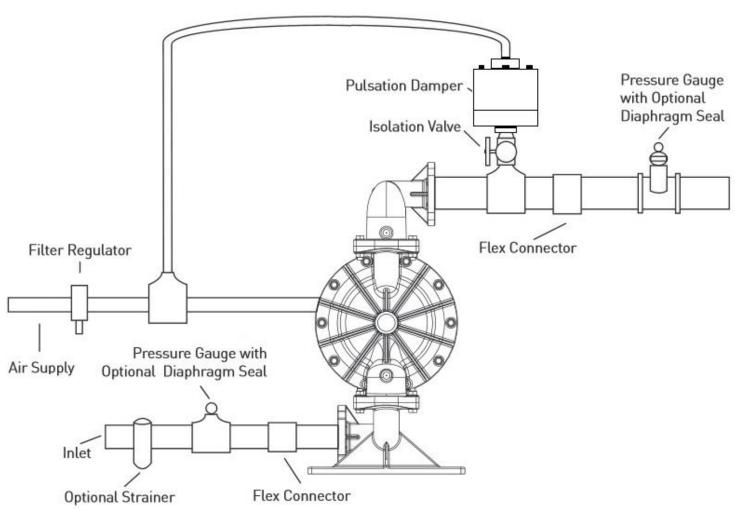

This illustration is a generic representation of an air operated double-diaphragm pump.

## TROUBLESHOOTING

#### **PROBLEM**

#### **EFFECT/SOLUTION**

| Pump Will Not Cycle | Pumr | וווW מו | l Not C | vcle |
|---------------------|------|---------|---------|------|
|---------------------|------|---------|---------|------|

Discharge line closed or plugged

Discharge filter blocked Check valve stuck

Air filter blocked

Air supply valve closed

Air supply hooked up to muffler side of pump Compressor not producing air or turned off

Muffler iced or blinded Diaphragm ruptured

Plant air supply line ruptured

Air valve wear/debris Pilot sleeve wear/debris Diaphragm rod broken Diaphragm plate loose

#### Pumped Fluid Coming Out of Muffler

Diaphragm ruptured Diaphragm plate loose

Inlet liquid pressure excessive (above 10 psig)

#### Pump Cycles but no Flow

Inlet strainer clogged Suction valve closed Suction line plugged No liquid in the suction tank

No liquid in the suction tank Suction lift excessive

Debris stuck in valves

Excessive wear of check valves

Air leak on suction side with suction lift

#### Pump Cycles with Closed Discharge Valve

Debris stuck in check valve Excessive wear of check valves

#### Pump Running Slowly/Not Steady

Air compressor undersized

Leak in air supply

Air-line, filter regulator or needle valve undersized

Muffler partially iced or blinded Air valve gasket leak or misalignment

Air valve wear/debris Pilot sleeve wear/debris Liquid fluid filter blocked

Pump may be cavitating, reduce speed of operation

Suction strainer clogged

#### Pump Will Not Prime

Air leak in suction pipe

Air leak in pump manifold connections Suction strainer and lines clogged

Excessive lift conditions Check valve wear Debris in check valve

#### **OPERATION**

The Air-Operated Double Diaphragm Pump requires a minimum of 20 psig of air to operate, with some variation according to diaphragm material. Increasing the air pressure results in a more rapid cycling of the pump and thus a higher liquid flow rate. In order to not exceed 120 psig of inlet air pressure, and for accurate control of the pump, it is suggested to use a pressure regulator on the air inlet.

An alternate means of controlling the flow-rate of the pump is to use an inlet air valve and partially open or close accordingly. When the air valve is completely in the closed position, the pump will cease to operate.

A third method of controlling the flow rate of the pump is to use a liquid discharge valve. Closing the liquid discharge valve will cause a decrease in the flow rate since the pump will operate against a higher discharge pressure.

Solenoid control of the inlet air may also be used in order to facilitate remote operation. A three way solenoid valve is recommended, in order to allow the air to "bleed off" between the solenoid and the pump.

Do not use valves for flow control on the suction side of the pump. (Closing or partially closing a liquid suction valve restrict the suction line and may cause damage to the diaphragms.) Suction strainers may be employed to reduce or eliminate larger solids, but routine maintenance is necessary in order to prevent a restriction on the suction.

#### **MAINTENANCE**

Due to the unique nature of each application, periodic inspection of the pump is the best method to determine a proper maintenance schedule. A record should be kept of all repairs made to an installed pump. This will serve as the best predictor of future maintenance.

Typical maintenance involves replacing of "wear-parts" such as the diaphragms, balls, valve seats and O-rings. Proper maintenance can ensure trouble-free operation of the pump. Refer to repair and assembly instructions for further details.

**WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

#### MAINTENANCE SCHEDULE

#### WEEKLY (OR DAILY)

Make a visual check of the pump. If pumped fluid is leaking out of the pump, pipe fittings or muffler turn off pump and schedule maintenance.

#### **EVERY THREE MONTHS**

Inspect fasteners and tighten any loose fasteners to recommended torque settings.

Schedule pump service based on pump's service history.



## REPAIR AND ASSEMBLY


### PUMP WET END REMOVAL

#### **TOOLS NEEDED**

- 1) One Wrench,  $\frac{7}{16}$  Inch
- 2) Two Wrenches, ½ Inch
- 3) Two Wrenches, ¾ Inch
- 4) One Screwdriver, Slotted Head


**WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

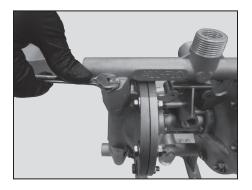

#### STEP 1

Using the 7/16 inch wrench remove four "Hex-Head Cap Screws (1/4"-20 x 1-3/4")" and four "Flat Washers (1/4")" from the "Discharge Manifold"

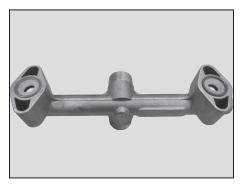

#### STEP 2


Remove the "Discharge Manifold".






#### STEP 3

Remove the "O-Ring", "Valve Seat" and "Ball" from the "Discharge Manifold".

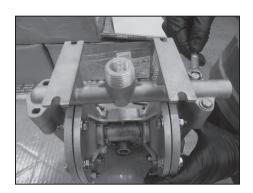


#### STEP 4

Using the 7/16 inch wrench remove four "Hex-Head Cap Screws (1/4"-20 x 1-3/4")" and four "Flat Washers (1/4")" from the "Suction Manifold".

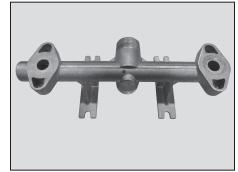


#### STEP 5

Remove the "Suction Manifold".

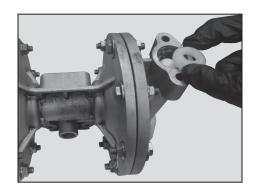

#### STEP 6

Remove the "O-Ring", "Valve Seat" and "Ball" from the "Suction Manifold".

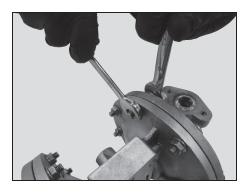

#### STEP 7

In order to remove "Outer Chambers", using two ½ inch wrenches, remove eight "Hex Head Cap Screws (5/16"–18 x 1-3/4")", eight "Flat and Lock Washers (5/16")" and eight "Hex Flange Nuts (5/16"-18)" from each side.





#### STEP 8

Remove both "Outer Chambers" from the "Intermediate".



#### STEP 9

Using two ¾ Inch wrenches, remove "Outer Diaphragm Plate", "Diaphragm", "Inner Diaphragm Plate" and "Flat Washer (1/4")" from one side of the pump.

#### STEP 10

Placing the ¾ inch wrench on the remaining "Outer Diaphragm Plate", and the 7/16 inch wrench on the "Diaphragm Rod Assembly", remove the remaining "Outer Diaphragm Plate", "Diaphragm", "Inner Diaphragm Plate" and "Flat Washer (1/4")" from the other side of the pump.

### PUMP WET END ASSEMBLY

To assemble the wet end of the pump, reverse the order of disassembly. Ensure all hardware is fastened in accordance with torque specifications (see page 19). Inverting one of the diaphragms during reassembly will facilitate ease of assembly.

## REPAIR AND ASSEMBLY


### AIR VALVE REMOVAL

#### **TOOLS NEEDED**

- 1) One Wrench,  $\frac{7}{16}$  Inch
- 2) One Pick, General Purpose
- 3) One Pair of Pliers

**WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

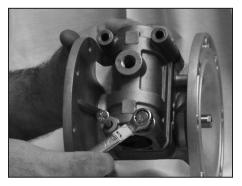

#### STEP 1

Using the  $^{7}/_{16}$  inch wrench, remove four "Hex Head Cap Screws (1/4"-20)", four "Lock Washers (1/4")" and four "Flat Washers (1/4")".




STEP 2

Remove the main "Air-Valve Assembly" from the pump.



STEP 3

Remove the "Air-Valve Gasket" from the main "Air-Valve Assembly".

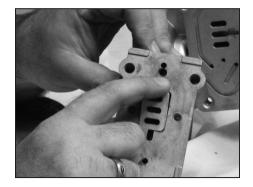

#### STEP 4

Remove the "Shuttle Plate" from the main "Air-Valve Assembly".

Note: The smooth shinny side of the shuttle plate should be toward the shuttle car.



#### STEP 5

Remove the "Shuttle" from the main "Air-Valve Assembly".



#### STEP 6


Using the pair of pliers, remove the "Air Valve End Plug" from the main "Air-Valve Assembly".

Ensure the "O-Ring" is installed when reassembling.




#### STEP 7

Remove the "Air Valve Spool" from the main "Air-Valve Assembly". Note: Insert larger chamfer first. The smaller chamfer is to be on the plug side.

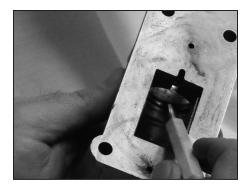

#### STEP 8

Using the pick, remove the "Lip Seal (Air Valve)" from the main "Air-Valve Assembly".

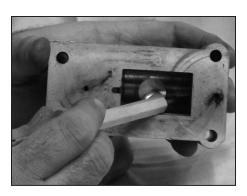

#### STEP 9

Using the pick, remove the second "Lip Seal (Air Valve)" from the main "Air-Valve Assembly".

## **AIR VALVE ASSEMBLY**

To assemble the air valve, reverse the order of disassembly. During assembly, ensure that the open side of the lip-seals are both facing each other inward. Install the shuttle plate with the smooth/shinny side toward the shuttle car. Lubrication of the air valve assembly, with a non-synthetic lubricant, is recommended. Magna-Lube or Magna-Plate are recommended for assembly lubrication (see detailed parts list for ordering information).

Note that if the lip-seals are installed incorrectly, they will be unable to rotate. Insert the spool, larger chamfer first, smaller chamfer to be on the plug side (longer piston/smaller boss), ensure O-ring is installed and then the air-valve end plug into position.

## REPAIR AND ASSEMBLY

### PILOT VALVE REMOVAL

#### TOOLS NEEDED

- 1) One Screwdriver, #2 Phillips
- 2) Two Wrenches, <sup>7</sup>/<sub>16</sub> Inch

**WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**WARNING** Maintenance must not be performed when a hazardous atmosphere is present.



#### STEP 1

Using the screwdriver, remove three "Phillips Pan-Head Screws [#6-32]" in order to remove the "Retaining Plate". Repeat for both sides of the pump.



#### STEP 2

Remove the diaphragm rod and the pilot sleeve assembly from the "Intermediate".



#### STEP 3

Remove both "Lip Seals (Diaphragm Rod)" and both "End Spacers (Pilot Sleeve)" from the pilot sleeve assembly. Remove both "O-Rings (End Spacer)" from both "End Spacers (Pilot Sleeve)".



#### STEP 4

Remove three "Inner Spacers (Pilot Sleeve)" and four "O-Rings (Pilot Sleeve)" from the pilot sleeve assembly.



#### STEP 5

thread locker.

Using two 7/16 inch wrenches, dissemble the "Diaphragm Rod Assembly" into its two parts. Note: They are installed with



#### STEP 6

Remove the "Pilot Sleeve" from the disassembled "Diaphragm Rod Assembly".

### PILOT VALVE ASSEMBLY

To assemble the pilot valve, reverse the order of disassembly. Should process fluid have contact with the pilot valve O-rings, they should be replaced as swelling may occur and cause irregular operation. During assembly, ensure that the open side of the lip-seals are facing outward. Lubrication of the pilot sleeve assembly, with a non-synthetic lubricant, is recommended in order to facilitate re-assembly into the intermediate. Magna-Lube or Magna-Plate are recommended for assembly lubrication (see detailed parts list for ordering information).

#### TORQUE SPECIFICATION CHART


#### RECOMMENDED TORQUE SPECIFICATIONS

|                        | 1/2" and 3/4" Pumps | Wrench Size |  |
|------------------------|---------------------|-------------|--|
| Manifold Bolts         | 78 in-lbs (8.8 N-m) | 7/16"       |  |
| Chamber Bolts          | 85 in-lbs (9.6 N-m) | 1/2"        |  |
| Air Valve Bolts        | 40 in-lbs (4.5 N-m) | 7/16"       |  |
| Diaphragm plate        | 70 in-lbs (7.9 N-m) | 3/4"        |  |
| Diaphragm plate (PTFE) | 70 in-lbs (7.9 N-m) | 3/4"        |  |



## **EXPLODED VIEW & PARTS LIST**

ALUMINUM AND STAINLESS STEEL PUMPS WITH ALUMINUM CENTER SECTION (A075-\*A\*-\*\*\*\*-\*\*\*)

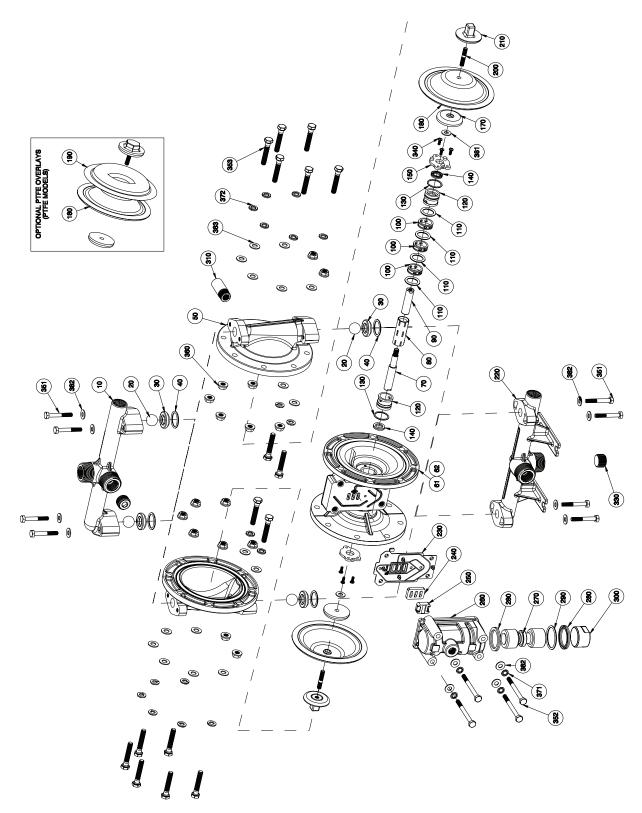

## PARTS LIST - ALUMINUM AND STAINLESS STEEL PUMPS WITH ALUMINUM CENTER SECTION (A075-\*A\*-\*\*\*\*)

| ITEM      | DESCRIPTION                 | QTY | PUMP MODEL                             | PART NO.                           | MATERIAL                    |
|-----------|-----------------------------|-----|--|------------------------------------|-----------------------------|
| 10        | DISCHARGE MANIFOLD          | 1   | A075-N*A-***-**                        | 11329-A075-20-N                    | Aluminum                    |
| 10        | DISCHARGE MAINIFULD         | 1   | A075-B*A-***-**                        | 11329-A075-20-N<br>11329-A075-20-B | Aluminum                    |
|           |                             |     | A075-N*3-***-***                       | 11329-A075-26-N                    | Stainless Steel             |
|           |                             |     | A075-B*3-***-**                        | 11329-A075-26-T                    | Stainless Steel             |
| 20        | BALL                        | 4   | A075-***-*V**-***                      | 11000-13                           | FKM                         |
|           |                             |     | A075-***-*G**-***                      | 11000-19                           | Geolast®                    |
|           |                             |     | A075-***-*S**-***                      | 11000-23                           | Santoprene®                 |
|           |                             |     | A075-***-*3**-***<br>A075-***-*T**-*** | 11000-26<br>11000-45               | Stainless Steel<br>PTFE     |
| 30        | VALVE SEAT                  | 4   | A075-***-**A*-***                      | 10900-20                           | Aluminum                    |
| 30        | VALVE SEAT                  | 4   | A075-***-**3*-***                      | 10900-20                           | Stainless Steel             |
|           |                             |     | A075-***-**P*-***                      | 10900-40                           | Polyproplyene               |
|           |                             |     | A075-***-**Y*-***                      | 10900-42                           | Nylon                       |
|           |                             |     | A075-***-**K*-***                      | 10900-56                           | PVDF                        |
| 40        | O-RING (VALVE SEAT)         | 4   | A075-***-***N-***                      | 11904-11                           | Nitrile                     |
|           |                             |     | A075-***-***V-***                      | 11904-13                           | FKM                         |
|           |                             |     | A075-***-***E-***<br>A075-***-***T-*** | 11904-15                           | EPDM                        |
|           | OUTED OUANDED               |     |  | 11904-17                           | PTFE                        |
| 50        | OUTER CHAMBER               | 2   | A075-**A-***-***<br>A075-**3-***       | 10720-20<br>10720-26               | Aluminum<br>Stainless Steel |
| 61 & 62   | INTERMEDIATE                | 1   | A075-*A*-***-**                        | 11527-20                           | Aluminum                    |
| 70 & 90   | DIAPHRAGM ROD ASSEMBLY      | 1   | ALL MODELS                             | 33000-00                           | Stainless Steel             |
| 80        | PILOT SLEEVE                | 1   | ALL MODELS                             | 10105-31 Δ                         | Acetel                      |
| 100       | INNER SPACER (PILOT SLEEVE) | 3   | ALL MODELS                             | 10203-40 Δ                         | Polyproplyene               |
| 110       | O-RING (PILOT SLEEVE)       | 4   | ALL MODELS                             | 11920-16 Δ                         | Urethane                    |
| 120       | END SPACER (PILOT SLEEVE)   | 2   | ALL MODELS                             | 10204-40 Δ                         | Polyproplyene               |
| 130       | O-RING (END SPACER)         | 2   | ALL MODELS                             | 11923-11 Δ                         | Nitrile                     |
| 140       | LIP SEAL (DIAPHRAGM ROD)    | 2   | ALL MODELS                             | 12000-76 Δ                         | Nitrile                     |
| 150       | RETAINING PLATE             | 2   | ALL MODELS                             | 12708-54                           | Nylon                       |
| 160       | N/A                         |     |  |                                    |                             |
| 170       | INNER DIAPHRAGM PLATE       | 2   | ALL MODELS                             | 11100-40                           | Polyproplyene               |
| 180       | DIAPHRAGM                   | 2   | A075-***-V***-***                      | 10600-13                           | FKM                         |
|           |                             |     | A075-***-G***-***                      | 10600-19                           | Geolast®                    |
|           |                             |     | A075-***-N***-***<br>A075-***-S***-*** | 10600-21                           | Nitrile                     |
|           |                             |     | A075-***-T***-***                      | 10600-23<br>10600-23               | Santoprene®<br>Santoprene®  |
| 190       | OVERLAY (OPTIONAL)          | 2   | A075-***-T***-**                       | 11400-59                           | PTFE                        |
| 200 & 210 | OUTER DIAPHRAGM PLATE       | 2   | A075-**A-***-**                        | 11208-20                           | Aluminum                    |
| 200 & 210 | OUTER DIAI TIMAOM T LATE    | ۷   | A075-**3-***-***                       | 11208-26                           | Stainless Steel             |
| 220       | SUCTION MANIFOLD            | 1   | A075-N*A-***-**                        | 11328-A075-20-N                    | Aluminum                    |
|           |                             |     | A075-B*A-***-***                       | 11328-A075-20-B                    | Aluminum                    |
|           |                             |     | A075-N*3-***-**                        | 11328-A075-26-N                    | Stainless Steel             |
|           |                             |     | A075-B*3-***-**                        | 11328-A075-26-T                    | Stainless Steel             |
| 230       | AIR VALVE GASKET            | 1   | ALL MODELS                             | 12126-19 ‡                         | Nitrile                     |
| 240       | SHUTTLE PLATE               | 1   | ALL MODELS                             | 10416-77 ‡                         | Ceramic                     |
| 250       | SHUTTLE                     | 1   | ALL MODELS                             | 10415-00 ‡                         | Special                     |
| 260       | AIR VALVE BODY              | 1   | A075-*A*-***-***                       | 42001-20 ‡                         | Aluminum                    |
| 270       | AIR VALVE SPOOL             | 1   | ALL MODELS                             | 10480-31 ‡                         | Acetel                      |
| 280       | LIP SEAL (AIR VALVE)        | 2   | ALL MODELS                             | 12003-76 ‡                         | Nitrile                     |
| 290       | O-RING (AIR VALVE END PLUG) | 1   | ALL MODELS                             | 11913-11 ‡                         | Nitrile                     |
|           |                             |     |  |                                    |                             |

## PARTS LIST - ALUMINUM AND STAINLESS STEEL PUMPS WITH ALUMINUM CENTER SECTION (A075-\*A\*-\*\*\*\*)


| ITEM        | DESCRIPTION                           | QTY      | PUMP MODEL                           | PART NO.             | MATERIAL                        |
|-------------|---------------------------------------|----------|--------------------------------------|----------------------|---------------------------------|
| 300         | AIR VALVE END PLUG                    | 1        | A075-*A*-***-***                     | 11706-20 ‡           | Aluminum                        |
| 310         | MUFFLER<br>MUFFLER (METAL)            | 1        | ALL MODELS<br>Optional               | 13008-00<br>13002-00 | Standard<br>Metal               |
| 320         | N/A                                   |          |                                      |                      |                                 |
| 340         | PAN-HEAD MACH SCREW (#6-32 x 7/16)    | 6        | A075-**A-***-***                     | 12585-26             | Stainless Steel                 |
| 351         | HEX HEAD CAP SCREW (1/4"-20 x 1-3/4") | 8        | A075-**A-***-*0*<br>A075-**3-***-*0* | 12500-25<br>12500-26 | Plated Steel<br>Stainless Steel |
| 352         | HEX HEAD CAP SCREW (1/4"-20 x 2-3/4") | 4        | A075-*AA-***-*0*<br>A075-*A3-***-*0* | 12576-25<br>12576-26 | Plated Steel<br>Stainless Steel |
| 353         | HEX HEAD CAP SCREW (5/16-18 x 1-3/4") | 16       | A075-**A-***-*0*<br>A075-**3-***-*0* | 12503-25<br>12503-26 | Plated Steel<br>Stainless Steel |
| 360         | HEX FLANGE NUT (5/16"-18)             | 16       | A075-**A-***-*0*<br>A075-**3-***-*0* | 12608-25<br>12608-26 | Plated Steel<br>Stainless Steel |
| 371         | LOCK WASHER (1/4")                    | 4        | A075-**A-***-*0*<br>A075-**3-***-*0* | 12350-25<br>12350-26 | Plated Steel<br>Stainless Steel |
| 372         | WASHER, SPLIT LOCK (5/16")            | 16       | A075-**A-***-*0*<br>A075-**3-***-*0* | 12313-25<br>12313-26 | Plated Steel<br>Stainless Steel |
| 381         | WASHER (1/4")                         | 2        | ALL MODELS                           | 12300-26             | Stainless Steel                 |
| 382         | WASHER (1/4")                         | 12<br>12 | A075-**A-***-*0*<br>A075-**3-***-*0* | 12300-25<br>12300-26 | Plated Steel<br>Stainless Steel |
| 383         | WASHER (5/16")                        | 16       | A075-**A-***-*0*<br>A075-**3-***-*0* | 12310-25<br>12310-26 | Plated Steel<br>Stainless Steel |
| 390         | N/A                                   |          |                                      |                      |                                 |
| 400         | GROUNDING LUG (NOT SHOWN)             | 1        | OPTIONAL                             | 13481-20             | Aluminum                        |
|             | Magnalube® .75 oz. (As Required)      |          | ALL MODELS                           | 13404-00             | Grease                          |
| * Any Ch    | naracter                              |          |                                      |                      |                                 |
| <del></del> | Only sold as part of assembly         |          |                                      |                      |                                 |

 $<sup>\</sup>ddagger$  ,  $\Delta$ ,  $\dagger$  Only sold as part of assembly

| ASSEMBLY PART NUMBERS                                       | PUMP MODEL       | PART NO.      | MATERIAL |
|---|------------------|---------------|----------|
| ‡ AIR VALVE ASSEMBLY 230, 240, 250, 260, 270, 280, 290, 300 | A075-*A*-****    | AMK-075-A     | Various  |
| Δ PILOT SEEVE ASSEMBLY<br>80, 100, 110, 120, 130, 140       | A075-*A*-***-*** | APK-075-A     | Various  |
| PILOT SEEVE ELASTOMER KIT<br>INCLUDES 100 THROUGH 140       | ALL MODELS       | PEK-32000     | Various  |
| † WET END REPAIR KIT<br>20, 30, 40, 180, 190                | A075-*A*-****    | AWE-075-***-M | Various  |

## **EXPLODED VIEW & PARTS LIST**

ALUMINUM AND STAINLESS STEEL PUMPS WITH PLASTIC CENTER SECTION (A075-\*P\*-\*\*\*\*)

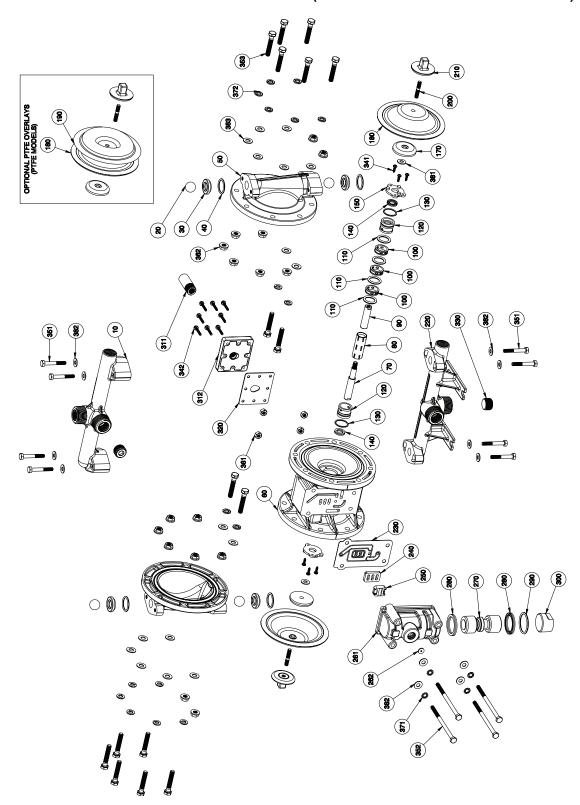

## PARTS LIST - ALUMINUM AND STAINLESS STEEL PUMPS WITH PLASTIC CENTER SECTION (A075-\*P\*-\*\*\*\*-\*\*\*)

| ITEM                    | DESCRIPTION                 | QTY   | PUMP MODEL                             | PART NO.                 | MATERIAL                |
|-------------------------|-----------------------------|-------|--|--------------------------|-------------------------|
| 10                      | DISCHARGE MANIFOLD          | 1     | A075-N*A-***-***                       | 11329-A075-20-N          | Aluminum                |
|                         |                             |       | A075-B*A-***-***                       | 11329-A075-20-B          | Aluminum                |
|                         |                             |       | A075-N*3-***-***                       | 11329-A075-26-N          | Stainless Steel         |
|                         |                             |       | A075-B*3-***-**                        | 11329-A075-26-T          | Stainless Steel         |
| 20                      | BALL                        | 4     | A075-***-*V**-***                      | 11000-13                 | FKM                     |
|                         |                             |       | A075-***-*G**-***                      | 11000-19                 | Geolast®                |
|                         |                             |       | A075-***-*S**-***<br>A075-***-*3**-*** | 11000-23<br>11000-26     | Santoprene®             |
|                         |                             |       | A075-***-*T**-***                      | 11000-26                 | Stainless Steel<br>PTFE |
| 30                      | VALVE SEAT                  | 4     | A075-***-**A*-***                      | 10900-20                 | Aluminum                |
| 30                      | VALVE SEAT                  | 4     | A075-***-**3*-***                      | 10900-26                 | Stainless Steel         |
|                         |                             |       | A075-***-**P*-***                      | 10900-40                 | Polyproplyene           |
|                         |                             |       | A075-***-**Y*-***                      | 10900-42                 | Nylon                   |
|                         |                             |       | A075-***-**K*-***                      | 10900-56                 | PVDF                    |
| 40                      | O-RING (VALVE SEAT)         | 4     | A075-***-***N-***                      | 11904-11                 | Nitrile                 |
|                         |                             |       | A075-***-***V-***                      | 11904-13                 | FKM                     |
|                         |                             |       | A075-***-***E-***                      | 11904-15                 | EPDM                    |
|                         |                             |       | A075-***-***T-***                      | 11904-17                 | PTFE                    |
| 50                      | OUTER CHAMBER               | 2     | A075-**A-***-***                       | 10720-20                 | Aluminum                |
|                         |                             |       | A075-**3-***-***                       | 10720-26                 | Stainless Steel         |
| 60                      | INTERMEDIATE                | 1     | A075-*P*-***-***                       | 11521-60                 | Polypropylene           |
| 70 & 90                 | DIAPHRAGM ROD ASSEMBLY      | 1     | ALL MODELS                             | 33000-00                 | Stainless Steel         |
| 80                      | PILOT SLEEVE                | 1     | ALL MODELS                             | 10105-31 Δ               | Acetel                  |
| 100                     | INNER SPACER (PILOT SLEEVE) | 3     | ALL MODELS                             | 10203-40 Δ               | Polyproplyene           |
| 110                     | O-RING (PILOT SLEEVE)       | 4     | ALL MODELS                             | 11920-16 Δ               | Urethane                |
| 120                     | END SPACER (PILOT SLEEVE)   | 2     | ALL MODELS                             | 10204-40 Δ               | Polyproplyene           |
| 130                     | O-RING (END SPACER)         | 2     | ALL MODELS                             | 11923-11 Δ               | Nitrile                 |
| 140                     | LIP SEAL (DIAPHRAGM ROD)    | 2     | ALL MODELS                             | 12000-76 Δ               | Nitrile                 |
| 150                     | RETAINING PLATE             | 2     | ALL MODELS                             | 12708-54                 | Nylon                   |
| 160                     | N/A                         |       | ALL MODELS                             | 12700-34                 | Nyton                   |
|                         |                             |       | 41.1.140.D.E.I.C                       | 44400 (0                 |                         |
| 170                     | INNER DIAPHRAGM PLATE       | 2     | ALL MODELS                             | 11100-40                 | Polyproplyene           |
| 180                     | DIAPHRAGM                   | 2     | A075-***-V***-***                      | 10600-13                 | FKM                     |
|                         |                             |       | A075-***-G***-***<br>A075-***-N***-**  | 10600-19                 | Geolast®                |
|                         |                             |       | A075-***-S***-**                       | 10600-21<br>10600-23     | Nitrile<br>Santoprene®  |
|                         |                             |       | A075-***-T***-***                      | 10600-23                 | Santoprene®             |
| 190                     | OVERLAY (OPTIONAL)          | 2     | A075-***-T***-***                      | 11400-59                 | PTFE                    |
| 200 & 210               | OUTER DIAPHRAGM PLATE       | 2     | A075-**A-***-***                       | 11208-20                 | Aluminum                |
| 200 Q 210               | OUTER DIAPHRAGIN PLATE      | ۷     | A075-**3-****-***                      | 11208-26                 | Stainless Steel         |
| 220                     | SUCTION MANIFOLD            | 1     | A075-N*A-***-**                        | 11328-A075-20-N          | Aluminum                |
| 220                     | SCOTION MAINITULD           | ı     | A075-B*A-***-**                        | 11328-A075-20-B          | Aluminum                |
|                         |                             |       | A075-N*3-***-***                       | 11328-A075-26-N          | Stainless Steel         |
|                         |                             |       | A075-B*3-***-**                        | 11328-A075-26-T          | Stainless Steel         |
| 230                     | AIR VALVE GASKET            | 1     | ALL MODELS                             | 12116-19 ‡               | Nitrile                 |
| 240                     | SHUTTLE PLATE               | 1     | ALL MODELS                             | 10416-77 ‡               | Ceramic                 |
| 250                     | SHUTTLE                     | <br>1 | ALL MODELS                             | 10415-00 ‡               | Special                 |
| 200                     | AIR VALVE BODY              | 1     | A075-*P*-***                           | 11614-60 ‡               | · ·                     |
| 261 8. 242              | ALL VALVE DULLI             | I     | AU/J- F'-'''                           | 11014-00 ‡               | Polypropylene           |
|                         |                             | 4     | ALL MODELC                             | 10/00 01 ±               | ۱ ۱ ۱ ۱                 |
| 270                     | AIR VALVE SPOOL             | 1     | ALL MODELS                             | 10480-31 ‡               | Acetel                  |
| 261 & 262<br>270<br>280 |                             | 1 2   | ALL MODELS ALL MODELS ALL MODELS       | 10480-31 ‡<br>12003-76 ‡ | Acetel<br>Nitrile       |

PARTS LIST - ALUMINUM AND STAINLESS STEEL PUMPS WITH PLASTIC CENTER SECTION (A075-\*P\*-\*\*\*-\*\*\*)

| ITEM [                           | DESCRIPTION                           | QTY | PUMP MODEL                           | PART NO.             | MATERIAL                        |
|----------------------------------|---------------------------------------|-----|--------------------------------------|----------------------|---------------------------------|
| 300                              | AIR VALVE END PLUG                    | 1   | A075-*P*-***-**                      | 11703-60 ‡           | Polypropylene                   |
| 311                              | MUFFLER<br>MUFFLER (METAL)            | 1   | ALL MODELS<br>Optional               | 13008-00<br>13002-00 | Standard<br>Metal               |
| 312                              | MUFFLER PLATE                         | 1   | A075-*P*-***-**                      | 13111-60             | Polypropylene                   |
| 320                              | MUFFLER PLATE GASKET                  | 1   | A075-*P*-***-**                      | 12117-19             | Nitrile                         |
| 341                              | SCREW, SELF-TAP (#6 X 1/2")           | 6   | A075-*P*-***-**                      | 12510-26             | Stainless Steel                 |
| 342                              | SCREW, SLOTTED HEAD SELF-TAP (1")     | 8   | A075-*P*-***-**                      | 12525-26             | Stainless Steel                 |
| 351                              | HEX HEAD CAP SCREW (1/4"-20 x 1-3/4") | 8   | A075-**A-***-*0*<br>A075-**3-***-*0* | 12500-25<br>12500-26 | Plated Steel<br>Stainless Steel |
| 352                              | HEX HEAD CAP SCREW (1/4"-20 x 4-1/2") | 4   | A075-*PA-***-*0*<br>A075-*P3-***-*0* | 12513-25<br>12513-26 | Plated Steel<br>Stainless Steel |
| 353                              | HEX HEAD CAP SCREW (5/16-18 x 1-3/4") | 16  | A075-**A-***-*0*<br>A075-**3-***-*0* | 12503-25<br>12503-26 | Plated Steel<br>Stainless Steel |
| 361                              | HEX NUT (1/4"-20)                     | 4   | A075-*PA-***-*0*<br>A075-*P3-***-*0* | 12600-25<br>12600-26 | Plated Steel<br>Stainless Steel |
| 362                              | HEX FLANGE NUT (5/16"-18)             | 16  | A075-**A-***-*0*<br>A075-**3-***-*0* | 12608-25<br>12608-26 | Plated Steel<br>Stainless Steel |
| 371                              | LOCK WASHER (1/4")                    | 4   | A075-**A-***-*0*<br>A075-**3-***-*0* | 12350-25<br>12350-26 | Plated Steel<br>Stainless Steel |
| 372                              | WASHER, SPLIT LOCK (5/16")            | 16  | A075-**A-***-*0*<br>A075-**3-***-*0* | 12313-25<br>12313-26 | Plated Steel<br>Stainless Steel |
| 381                              | WASHER (1/4")                         | 2   | ALL MODELS                           | 12300-26             | Stainless Steel                 |
| 382                              | WASHER (1/4")                         | 12  | A075-**A-***-*0*<br>A075-**3-***-*0* | 12300-25<br>12300-26 | Plated Steel<br>Stainless Steel |
| 383                              | WASHER (5/16")                        | 16  | A075-**A-***-*0*<br>A075-**3-***-*0* | 12310-25<br>12310-26 | Plated Steel<br>Stainless Steel |
| 390                              | N/A                                   |     |                                      |                      |                                 |
| 400                              | GROUNDING LUG (NOT SHOWN)             | 1   | OPTIONAL                             | 13481-20             | Aluminum                        |
| Magnalube® .75 oz. (As Required) |                                       |     | ALL MODELS                           | 13404-00             | Grease                          |
| * Any Ch                         | aracter                               |     |                                      |                      |                                 |

 $<sup>\</sup>mbox{\tt \ddagger}$  ,  $\Delta,$   $\mbox{\tt †}$  Only sold as part of assembly

| ASSEMBLY PART NUMBERS  | PUMP MODEL      | PART NO.      | MATERIAL |
|--|-----------------|---------------|----------|
| ‡ AIR VALVE ASSEMBLY 230, 240, 250, 261, 262, 270, 280, 290, 300 | A075-*P*-***-** | AMK-075-P     | Various  |
| Δ PILOT SEEVE ASSEMBLY<br>80, 100, 110, 120, 130, 140            | A075-*P*-***-** | APK-075-P     | Various  |
| PILOT SEEVE ELASTOMER KIT INCLUDES 100 THROUGH 140               | ALL MODELS      | PEK-32000     | Various  |
| † WET END REPAIR KIT<br>20, 30, 40, 180, 190                     | A075-*P*-***-** | AWE-075-***-P | Various  |



# ELASTOMERS WETTED ELASTOMERS

#### **BUNA-N (NITRILE)**

is a general purpose elastomer used with water and many oils. Temperature range 10°F to 180°F (-12°C to 82°C).

#### **GEOLAST®**

is an injection molded thermoplastic material with characteristics similar to Nitrile. Has excellent abrasion resistance. Temperature range 10°F to 180°F (-12°C to 82°C).

#### **EPDM**

is a general purpose elastomer with good resistance to many acids and bases. Temperature range -40°F to 280°F (-40°C to 138°C).

#### **SANTOPRENE®**

is an injection molded material with characteristics similar to EPDM. Has excellent abrasion resistance. Temperature range -40°F to 225°F (-40°C to 107°C).

#### FKM

is an elastomer with good corrosion resistance to a wide variety of chemicals. Temperature range -40°F to 350°F (-40°C to 177°C).

#### PTFE (POLYTETRAFLUOROETHYLENE)

is a thermoplastic polymer that is inert to most chemicals. Temperature range 40°F to 220°F (4°C to 104°C).

Most of the above elastomers are available in FDA approved formulations.

Geolast® is a registered trademark of ExxonMobil Chemical Co. Santoprene® is a registered trademark of ExxonMobil Chemical Co. Hytrel® is a registered trademark of DuPont Performance Elastomers L.L.C. Magnalube® is a registered trademark of Carleton-Stuart Corp.



## WARRANTY AND REGISTRATION

WARRANTY. All All-Flo products shall be covered by the standard All-Flo Limited Warranty in effect at the time of shipment. This warranty (which may be modified by All-Flo at any time) provides:

MATERIALS SOLD ARE WARRANTED TO THE ORIGINAL USER AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS UNDER NORMAL USE (RENTAL USE EXCLUDED) FOR FIVE YEARS AFTER PURCHASE DATE. ANY PUMP WHICH IS DETERMINED TO BE DEFECTIVE IN MATERIAL AND WORKMANSHIP AND RETURNED TO ALL-FLO, SHIPPING COSTS PREPAID. WILL BE REPAIRED OR REPLACED AT ALL-FLO'S OPTION, CUSTOMER SHALL NOTIFY ALL-FLO IN WRITING WITHIN 30 DAYS OF ANY CLAIMED DEFECTS. NO MATERIALS CAN BE RETURNED WITHOUT THE PRIOR CONSENT OF ALL-FLO. AND IF APPROVED SHALL BE RETURNED TO ALL-FLO FREIGHT PREPAID. ALL-FLO'S LIABILITY FOR ANY BREACH OF THIS WARRANTY SHALL BE LIMITED TO EITHER REPLACEMENT OF THE MATERIALS OR, AT ALL-FLO'S SOLE OPTION, THE REFUND OF THE PURCHASE PRICE. ALL-FLO SHALL NOT BE HELD LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY BREACH OF THIS WARRANTY. THIS EXCLUSION APPLIES WHETHER SUCH DAMAGES WERE SOUGHT BASED ON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY IN TORT, OR ANY OTHER LEGAL THEORY. FURTHER, ALL-FLO SHALL NOT BE LIABLE FOR LOSSES, DELAYS, LABOR COSTS, OR ANY OTHER COST OR EXPENSE DIRECTLY OR INDIRECTLY ARISING FROM THE USE OF MATERIALS. ALL-FLO'S LIABILITY IS EXPRESSLY LIMITED TO THE REPLACEMENT OR REPAIR OF DEFECTIVE GOODS, OR THE TOTAL VALUE OF SUCH GOODS. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES. WHETHER EXPRESS, IMPLIED, OR ORAL INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AND ANY IMPLIED WARRANTIES OTHERWISE ARISING FROM A COURSE OF DEALING OR TRADE. All-Flo will not, in ANY event, be liable for any loss of profit, interruption of business or any other special, consequential or incidental damages suffered or sustained by Customer. All-Flo's total maximum liability to the customer in respect of sale of materials or services rendered by All-Flo is limited to the total monies received by All-Flo from the customer for the particular materials described in Customer's order.

All-Flo does not warrant any part or component that it does not manufacture, but will assign to the original end-user purchaser of any warranty received by it from the manufacturer, to extent such pass through is permitted by the manufacturer.

|  | · — · |                   |       |                               |  |
|--|-------|-------------------|-------|-------------------------------|--|
| REGISTRATION FORM  |       |                   |       |                               |  |
| Pump Model   |       | Pump Serial Numbe | er    |                               |  |
| Company Name   |       |                   |       |                               |  |
| Name   |       | Email             |       |                               |  |
| Phone #  | City  |                   | State | Zip                           |  |
| Qty of Pumps   |       | Fluid Pumping     |       |                               |  |
| How did you hear about us? Existing All-Flo use Web, Distributor, Magazine | er,   | <b>■</b> 8        |       | Scan QR code and              |  |
|  |       |                   |       | complete form on mobile phone |  |

MAIL TO: All-Flo | Attn: Product Registration 22069 Van Buren Street, Grand Terrace, CA 92313-5651



www.all-flo.com/registration-form.html



PSG 22069 Van Buren Street Grand Terrace, CA 92313-5651 USA P: +1 (440) 354-1700 F: +1 (440) 354-9466 all-flo.com

All-Flo is committed to the pursuit of designing and manufacturing the highest quality product available to industry. Since the beginning in 1986, All-Flo engineers have used their extensive knowledge of today's engineered materials, advanced air system logic and manufacturing techniques to develop the superior group of lube-free, air-operated diaphragm pumps found in this catalog. Every pump is performance engineered and quality built to provide trouble-free service under the toughest conditions.



Where Innovation Flows