


EBSRAY PUMPS



Installation, Operation and Maintenance Instructions

Internal Gear Pumps

MODELS MD100, MD114, MD112, MD200 and MD212

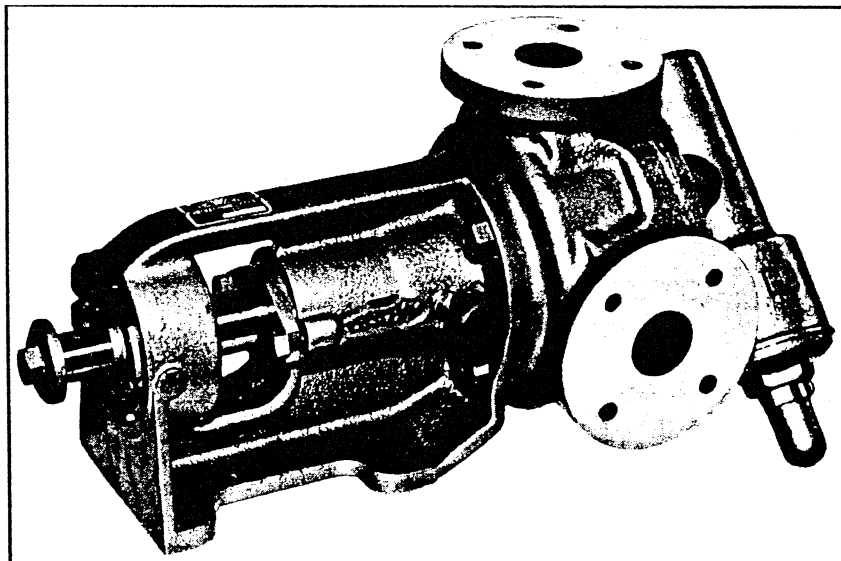

CLIENT:.....

PUMP Serial No:.....

Head Office and Works
628 Pittwater Road
Brookvale N.S.W. 2100
Phone (02) 9905 0234
Fax (02) 9938 3825

EBS-RAY PUMPS PTY. LIMITED

A.C.N. 000 061 003



Branch Office Victoria
Phone (03) 9706 7263
Fax (03) 9706 7312
Branch Office Queensland
Phone (07) 3260 7411
Fax (07) 3260 7422

SECTION I – GENERAL

INTRODUCTION

This leaflet is intended to assist those involved with the installation, operation and maintenance of EBSRAY Models MD100, MD114, MD112, MD200 and MD212 Internal Gear Positive Displacement Pumps. The design, materials and workmanship incorporated in the manufacture of EBSRAY pumps make them capable of reliable operation over a long working life. Correct installation is essential. Service life is enhanced by periodic inspection and careful maintenance.

I-A CAUTION

INSTALLATION AND SERVICING OF THIS EQUIPMENT SHOULD BE PERFORMED BY QUALIFIED COMPETENT PERSONNEL IN ACCORDANCE WITH RELEVANT STATUTORY REGULATIONS OR CODES, IN CONJUNCTION WITH THESE INSTRUCTIONS.

When the equipment supplied utilises components other than manufactured by EBSRAY e.g. couplings, speed reducers, electric motors etc, reference should be made to the original manufacturer's data before installation or servicing is commenced. Failure to observe these details may void the warranty.

I-B WARNING

The pump must be operated within the original selected design parameters of speed, temperature, pressure and viscosity. Should any change be contemplated, please confer with EBSRAY in order to verify the suitability of such a change.

I-C TRANSPORTATION AND PACKING

Standard domestic packing is suitable for shipment in covered transports. Ports must be sealed to exclude ingress of solids. When received on site the pump should be stored in a dry covered area.

If storage is required for other than a short period prior to installation, special preservatives and protective wrappings will be required.

I-D INSPECTION ON RECEIPT – SHORTAGES

On receipt of equipment, check all items against the despatch documents and inspect for damage. Any damage or shortage incurred during transit should be noted on the packing note and on both your own and the carrier's copy of the consignment note and a claim should be made immediately on the transport company.

Should a shortage be evident on receipt, notify EBSRAY immediately giving full details and packing note number.

I-E HANDLING

Care should be used in moving pumps. A sling should be placed under or around a bare shaft pump to minimise stress on the shaft or pump flanges. Baseplate mounted units should be lifted from under the baseplate below both the pump and driver ensuring compliance with the relevant lifting codes.

SECTION II — INSTALLATION

II-A LOCATION

The pumping unit should be placed as close as practicable to the source of supply remembering to keep within the NPSH requirement of the pump. Ensure floor area and headroom allotted is sufficient for inspection and maintenance. Allow sufficient space and ventilation for motor cooling requirements. Be sure to allow for crane or hoist access if required.

II-B FOUNDATIONS

Baseplate units should be accurately installed. When on a concrete foundation ensure that it has been poured on a solid footing. NOTE: Position foundation bolts to match baseplate foundation plan. Pumps/units must be securely bolted down.

II-C PUMP PIPING CONNECTIONS

All piping should be supported independently of and line up accurately with the pump ports. SEVERE DAMAGE COULD RESULT IF PIPING IS DRAWN INTO PLACE BY USE OF FORCE AT THE PORT CONNECTIONS OF THE PUMP.

II-D STRAINER PROTECTION

The pump suction should always be protected by an efficient suction strainer of adequate size to accommodate the liquid viscosity conditions without causing excessive suction resistance.

II-E ALIGNMENT

Alignment of the pump and driver is of extreme importance for trouble free mechanical operation. Baseplate mounted units are accurately aligned at the factory. To ensure this has been maintained during transit, alignment MUST BE checked once before startup and again after the unit has been run under actual operating conditions. NOTE: The following procedures are typical only and reference should be made to data for specific coupling types.

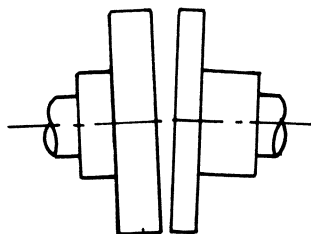


Fig.1

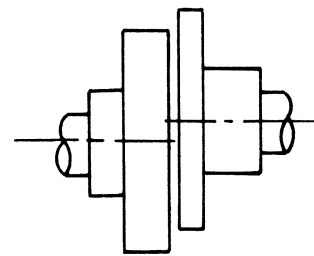


Fig.2

ANGULAR MISALIGNMENT as shown in Fig.1 should be corrected before eccentricity. Refer Fig.3; use feeler gauge reading at 90° intervals, the amount of correction necessary can be easily determined to bring shaft axes in line.

Misalignment due to ECCENTRICITY as shown in Fig.2 can now be corrected. Refer Fig.4; adjustment by use of shims under the driver or pump will effectively correct error in the vertical plane. Movement of Pump or Driver horizontally will correct error in the horizontal plane. NOTE: If both coupling halves are of identical diameter, concentricity may be checked with a straight edge at 90° intervals.

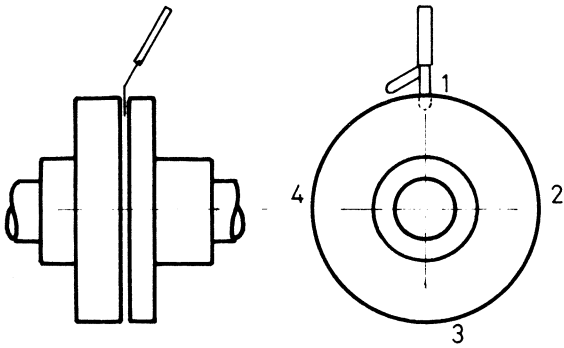


Fig.3

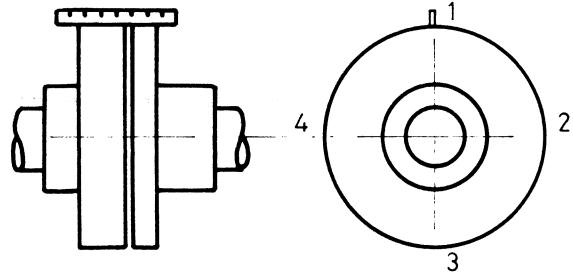


Fig.4

SECTION III — OPERATION

III-A DESCRIPTION

The EBSRAY internal gear principle is based upon the use of an outer rotor 'A', idler gear, termed inner rotor 'B' and a crescent shaped spacer 'C' which is cast integral with the cover. Thus only two moving parts fulfil this efficient displacement cycle. Power is applied to the outer rotor 'A' and transmitted to the meshing idler or inner rotor 'B'. The rotor teeth cells which are not involved in the meshing cycle are sealed by the crescent 'C', body and cover. (Refer Fig.5)

III-B PUMPING PRINCIPLE

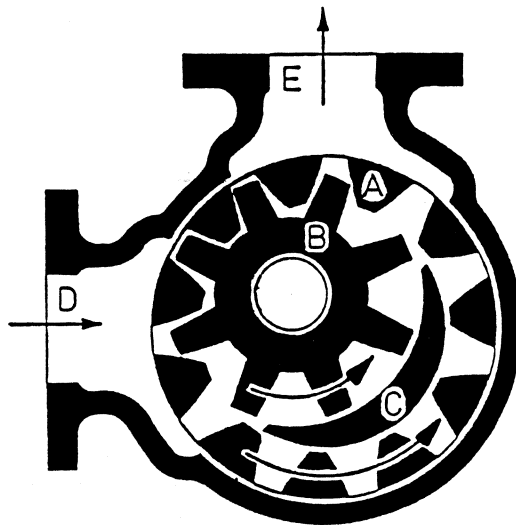


Fig.5

When rotation is started there is an increase in cell volume as the teeth come out of mesh. This creates a partial vacuum and the pressure differential thus created initiates movement of the liquid through the suction port 'D', filling the teeth cells of the two displacement rotors. When the tooth meshing withdrawl cycle is complete and the tooth cell volume is filled with liquid, transfer to the pressure or discharge side is effected as the liquid is carried past the crescent sealing member 'C'. This sealing crescent establishes a labyrinth between the high and low pressure sides, minimising fluid slip. When the teeth mesh on the pressure side the liquid is forced from the teeth cells and flows through the discharge port 'E'. A noteworthy feature of this simple principle is the absence of high tooth contact pressures when compared with conventional gear pumps, many of which employ costly external timing gears to minimise tooth wear.

The inner rotor 'B', or idler remains in almost hydraulic balance requiring only minimal torsional load to effectively follow the outer drive rotor.

III-C APPLICATIONS

The field of applications for Internal Gear rotary positive displacement pumps is extensive. These pumps are used to handle many kinds of liquids over a wide range of capacities and pressures, associated with viscous or non-viscous, hot or cold and corrosive or non-corrosive conditions. Accordingly material, speed and power specifications vary and it is important to use such equipment strictly adhering to the manufacturers' recommendations.

III-D LUBRICATION

Lubrication of the inner rotor bearing and bracket bearing is dependent on the pumpages' lubricating qualities/material selection of the bearing. The ball bearing is lubricated at the time of assembly with a high quality grease. Replacement of this grease is normally only necessary when major maintenance is carried out.

III-E STARTUP CHECKLIST

Lubricate as required.

Alignment of couplings.

Direction of rotation.

Freeness of shaft.

Do not start pump against closed discharge valve or with suction valve throttled

Ensure bypass valve (if fitted) is operational and set to the correct pressure.

DO NOT EXCEED SYSTEM OR PUMP DESIGN PRESSURE AS EQUIPMENT FAILURE COULD RESULT.

DO NOT RUN PUMP DRY. FAILURE TO REMOVE AIR/VAPOUR COULD PREVENT PUMP FROM PRIMING AND RESULT IN PUMP DAMAGE.

III-F OPERATIONAL CHECKS

Inspect pump frequently during the first few hours of operation for such conditions as excessive heating of bearings or stuffing box, vibration, unusual noises etc.

III-G BYPASS VALVE

To protect the pump from overpressure due to inadvertent shutting of discharge system, EBSRAY can supply either integral or inline bypass valves which are capable of circulating the entire pump output. The integral valve recirculates liquid within the pump. The inline type valve may be installed in the pump discharge line and normally returns to the suction side of the pump or back to tank. With both types of valve fluid temperature will rise if differential pressure is high and bypass conditions are maintained for extended periods. The integral valve is normally factory preset while the inline bypass valve is normally set on commissioning. The bypass valve should be set on site in accordance with the predetermined pump differential pressure required. Refer separate instructions.

SECTION IV – MAINTENANCE

PRIOR TO ANY DISASSEMBLY OR SERVICE, VERIFY THAT ALL REQUIREMENTS OF STATUTORY REGULATIONS OR CODES ARE MET AND THAT SPECIFIC SITE REQUIREMENTS ETC ARE SATISFIED.

Some minor maintenance tasks and inspections can be performed with the pump 'in line' so long as complete isolation, depressurising and purging procedures have been completed. However for major maintenance it is recommended that the pump be removed from the installation.

IV-A SPARE PARTS

1. When ordering spare parts, to ensure a minimum of delay and correct replacement to original specification ALWAYS quote the pump Serial Number which is located on the nameplate of the pump.
2. Advise the name, item number and quantity required.
Refer to Drg No. CMP001C
3. Advise complete delivery instructions.

IV-B PREPARATION FOR DISASSEMBLY

1. Obtain the appropriate Work Permit if required.
2. Isolate pump from liquids in suction and discharge lines, depressurise and purge out any toxic, flammable, corrosive or air hardening liquids.
3. Isolate power supply to motor.
4. Disconnect porting connections.
5. Remove pump from installation.
6. Mark relevant mating components for correct reassembly orientation.

IV-C DISASSEMBLY

Note: Before proceeding, make sure bracket is firmly attached to baseplate or bench etc. to avoid overbalancing when rotor is withdrawn.

1. Remove suction/pressure circulation harness assemblies if fitted.
2. Remove pump coupling half.
3. Release split clamp securing race carrier.

For pumps fitted with mechanical seals:

4. Release mechanical seal plate evenly to avoid damage.
5. Remove access plug and rotate shaft until drivescrew is accessible, loosen drivescrew 2 full turns to clear circlip groove.
6. Remove cover assembly complete with cover plate (if fitted) and inner rotor. If fitted with integral bypass valve, remove bypass valve as a unit and refer to bypass valve instructions for service. To remove cover use the tapped extraction holes. Care should be taken to prevent inner rotor sliding off inner rotor pin.
7. The rotor/shaft assembly can now be driven through the pump from the drive end taking care to adequately support the rotor end.
8. Remove mechanical seal components taking care to avoid damage to lapped faces.
9. Disassemble cover assembly.
10. Screw out race carrier.
11. Release grub screw from race carrier, screw out lockring and knock out ballrace.
12. Remove body from bracket if required.
13. Press out inner rotor bearing and rotor bearing if replacement is required.

For pumps fitted with packed glands:

Standard packed glands require correct grade packing for duty. A lantern ring when fitted must be correctly positioned. In some arrangements a lantern ring is used for suction return and relief of packing pressure, and is installed between the rotor bearing and the packing. In other arrangements it may be used for grease applications to packing.

4. Release glandplate.
5. Remove cover assembly complete with cover plate (if fitted) and inner rotor. If fitted with integral bypass valve, remove bypass valve as a unit and refer to bypass valve instructions for service. To remove cover use the tapped extraction holes. Care should be taken to prevent inner rotor sliding off inner rotor pin.
6. The rotor/shaft assembly can now be driven through the pump from the drive end taking care to adequately support the rotor end.

7. Screw out race carrier.
8. Release grubscrew from race carrier, screw out lockring and knock out ballrace.
9. Using a suitable tool, remove packing and lantern ring.
10. Disassemble cover assembly.
11. Remove body from bracket if required.
12. Press out inner rotor bearing and rotor bearing if replacement is required.

IV-D INSPECTION

Inspect components for damage or excessive wear. Note that typical wear of components in EBSRAY's rotary internal gear positive displacement pumps tend to compensate each other and working clearances are to some extent maintained by this compensation. If pump performance has been satisfactory, existing components although worn, may still have adequate service life and could be used provided any burrs or sharp edges are removed prior to reassembly.

Major refurbishing of the pump should be done in line with reconditioning to an 'as new' status as replacing or repairing one component will have an effect on other components and the working clearances of the pump.

IV-E REASSEMBLY- PRELIMINARY

1. Ensure all parts are clean before assembly. Remove any burrs.
2. Ensure free running fit of race carrier in bracket.
3. Fit felt sealing rings to race carrier and race lockring.
4. If replacing rotor bearing:
 - a) Metallic: Press-fit ensuring lubrication groove in bearing is adjacent to greaser hole in bracket.
 - b) Carbon: The recommended method of fitting carbon bearings is shrink fitting. Press-fitting carbon bearings may cause damage to the bearing. Fit bearing flush with spigot face. Care should be taken to ensure correct alignment.
Machine or ream to achieve correct clearance on shaft ensuring squareness and concentricity with locating spigot.
5. If replacing inner rotor bearing:
 - a) Metallic: Press in with bearing shoulder against one side of inner rotor. For bearing without shoulder, fit with end of bearing flush with inner rotor bearing extension end.
 - b) Carbon: Shrink-fit into inner rotor. (See 4b)
Machine or ream to achieve required clearance on inner rotor pin ensuring squareness and concentricity with inner rotor O.D.

Table of Clearances



V Radial = Inner Rotor to Crescent W = Diametral - Shaft to Bearing
 X Diametral - Outer Rotor to Body Y Axial - Rotors to Cover
 Z Diametral - Rotor Pin to Bearing

"A" STD RUNNING CLEARANCES ----- ALL CLEARANCES IN MILLIMETRES

	MD100	MD114	MD112	MD200	MD212
V	0.03-0.08	0.03-0.08	0.03-0.09	0.03-0.09	0.03-0.09
W	0.05-0.08	0.05-0.08	0.05-0.08	0.05-0.08	0.05-0.08
X	0.10-0.15	0.10-0.15	0.13-0.20	0.13-0.20	0.15-0.23
Y	0.03-0.05	0.03-0.05	0.04-0.06	0.05-0.07	0.05-0.07
Z	0.05-0.08	0.05-0.08	0.06-0.09	0.06-0.09	0.08-0.11

"B" STD RUNNING CLEARANCES

	MD100	MD114	MD112	MD200	MD212
V	0.03-0.08	0.03-0.08	0.03-0.09	0.03-0.09	0.03-0.09
W	0.08-0.11	0.08-0.11	0.08-0.11	0.08-0.11	0.08-0.11
X	0.18-0.23	0.18-0.23	0.20-0.25	0.20-0.25	0.23-0.30
Y	0.06-0.10	0.06-0.10	0.08-0.12	0.10-0.14	0.10-0.14
Z	0.05-0.08	0.05-0.08	0.06-0.09	0.06-0.09	0.08-0.11

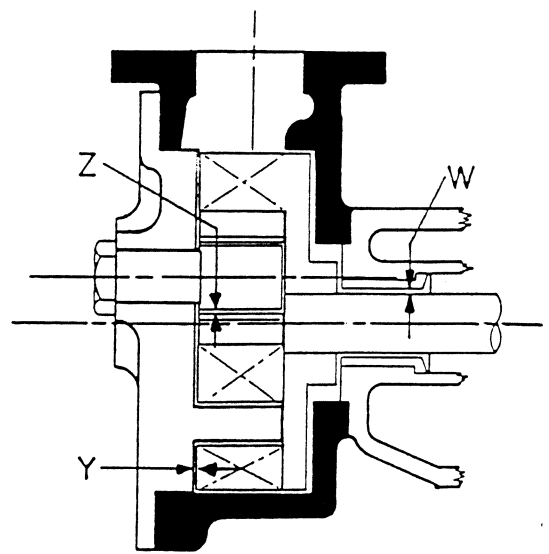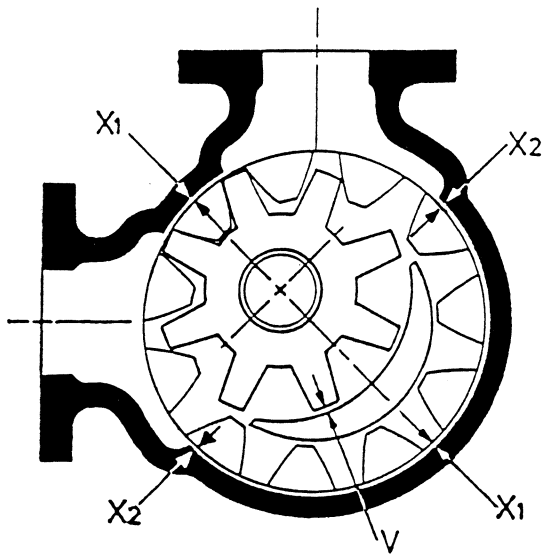


6. Carry out preliminary sizing checks:

a) Outer rotor in body diametral clearance. To measure clearance insert feeler guage at two opposite measurement points 'X₁'. Add the two clearances together. This will give the diametral clearance 'X' for the two points. Repeat this procedure for the other two measurement points 'X₂'. Note: When checking by this method, allowance or compensation must be made for axis misalignment caused by:

- i) Weight of rotor.
- ii) Clearances between shaft and rotor bearing.

- iii) Lack of bearing support at drive end
- b) Axial length of inner rotor, outer rotor teeth and cover crescent must be matched to within $\pm 0,02\text{mm}$.
- c) To check clearance between inner rotor and cover crescent, inner rotor should be held towards suction plane. Refer Fig. 7

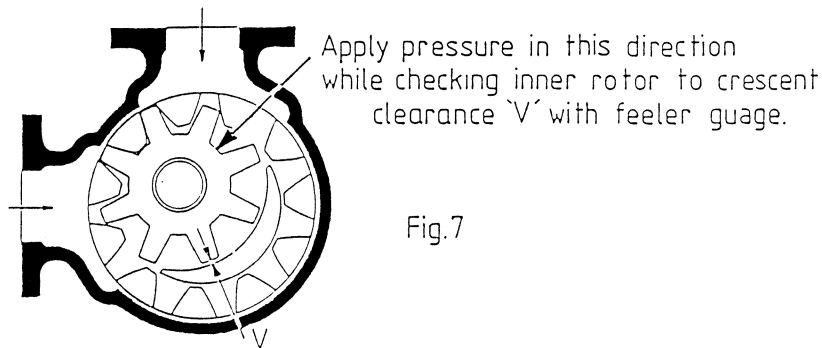

- 7. Ensure all suction/pressure circulation harness assemblies are clear of any obstructions.
- 8. EBSRAY recommend replacement of all gaskets, seals and "O"rings at every overhaul, to ensure positive sealing.

IV-F REASSEMBLY (Refer Drg No. CMP002B)

- 1. Apply a suitable sealant (eg. Loctite) to the inner rotor pin locating step. Press inner rotor pin into cover ensuring lubrication groove points centrally towards crescent and adequate support is given around the rotor pin bore boss when pressure is applied.
- 2. FOR PUMPS FITTED WITH COVER PLATE; Using a new gasket, fit cover plate to cover. Ensure correct alignment by using two bolts of the correct size, as locating pins in opposite mounting holes of the cover assembly.
- 3. Place inner rotor pin washer over inner rotor pin and lock inner rotor pin nut securely whilst maintaining lubrication groove location. Note: Use of a split clamp will aid this operation.
- 4. Fit body to bracket with sealing gasket between faces; maintaining correct suction and discharge port orientation, securely tighten in a uniform manner.
- 5. Insert rotor/shaft assembly ensuring rotor bearing is lubricated.
- 6. Fit inner rotor over inner rotor pin in cover assembly with projecting side (if fitted) towards cover, ensuring bearing is lubricated.
- 7. Fit cover assembly to body with sealing gasket between faces and making sure the seal land of the cover matches with the seal land in the pump body. Note: This seal land is diametrically opposite the centre of the cover crescent. Lubricate pump elements through pump port and check that

rotor/shaft assembly turns freely.

8. If pump is fitted with carbon bearings, fit 'O' ring to extraction washer, lubricate 'O' ring and slide extraction washer along shaft until seated against bearing.

For pumps fitted with mechanical seals:

9. Slide circlip along shaft ensuring gap in circlip lines up with access hole. (take care to avoid scratching shaft) Slide circlip retainer along shaft until located against circlip (a suitable tube may help), keep drive screw inline with access hole, tighten drive screw.
10. Insert spring, drivewasher, rotating 'O' ring, rotating face, stationary face, stationary 'O' ring and mechanical seal plate. Note: Particular care must be taken to avoid contamination of lapped seal surfaces by any foreign matter. All parts should be lubricated before assembly and drivepins must be located during assembly. Mechanical seal plate must be fastened evenly.

For pumps fitted with packed glands

9. Slide lantern ring along shaft and into position against bearing. Place packing rings in position in accordance with normal packing procedures. For standard square packing with one (1) lantern ring use seven (7) rings of 9.5mm square packing. For other types of packing refer to suppliers instructions.
10. Position gland plate and tighten slightly.
Final adjustment is carried out during operation of pump. Packed glands, when adjusted correctly allow a very small amount of seepage. If packing is too tight it will generate excessive heat, if too loose it will leak excessively.
11. Screw race carrier partially into bracket, so that lockring clamping grub screw is still accessible, lightly tighten split clamp.
12. If required, pack bearing with a high quality Lithium based grease in accordance with manufacturers recommendations. (DO NOT OVERFILL)
13. Slide bearing over shaft, using a suitable drift press bearing along shaft until bearing is seated in carrier. Only apply force on inner ring, as force applied to outer ring may damage bearing.
14. Screw lockring firmly into race carrier and lock in position with grub screw.
15. Loosen split clamp and screw race carrier into bracket until race inner ring makes contact with shaft shoulder.
16. Slide outer spacer sleeve over shaft and through race lockring felt seal, fit coupling key and coupling, lock onto shaft with shaft setscrew and shaft washer.
17. Replace suction/pressure circulation harness assemblies if fitted.

IV-G ROTOR AXIAL CLEARANCE ADJUSTMENT

The race carrier when finally positioned determines the ball bearing location within the bracket. As the ball bearing is firmly locked to the shaft shoulder by the spacer sleeve and coupling, the positioning of the ball bearing will control the rotor axial clearance.

To adjust axial clearance:

- a) Ensure shaft turns freely.
 - b) Screw race carrier in a clockwise direction whilst simultaneously rotating assembly. This enables sensing the rotor/cover point of contact i.e. a slight drag is felt by hand.
 - c) Mark race carrier position relative to bracket i.e. establish a datum point for setting axial clearance.
 - d) Back off race carrier 180 degrees to eliminate any backlash.
 - e) Retighten race carrier to a point measured radially from the previously marked datum equal to the amount of desired axial clearance.
- Note: 3mm radial movement on the O.D. of the race carrier equals 0.025mm axial movement of the rotor/shaft assembly. Refer Table of Clearances for actual clearances.
- f) At this point check for freeness of rotation of assembly. Axial clearance should now be established.
 - g) Firmly tighten split clamp to lock race carrier in position.

SECTION V — BYPASS VALVES

V-A PREPARATION FOR DISASSEMBLY

Isolate pump from liquids in suction and discharge lines, depressurise and purge out any toxic, flammable, corrosive or air hardening liquids.

V-B DISASSEMBLY

1. Remove adjusting screw cap.
2. Unscrew adjusting screw locknut and remove adjusting screw to relieve spring tension.
3. Unscrew bypass valve housing cap and withdraw internal components.
4. Remove bypass valve housing from pump cover if required.

V-C INSPECTION:

1. Inspect all components for damage or excessive wear. Repair or replace components as required.

V-D REASSEMBLY - PRELIMINARY

1. Lap valve into valve seat. Ensure no lapping compound remains as this may damage pump. Ensure bleed holes (if present) in valve and pressure pin are unobstructed.
2. EBSRAY recommend replacement of gaskets during every overhaul.

V-E REASSEMBLY -Poppet type valves as fitted to MD100 and MD114.

1. Screw locknut onto adjusting screw and screw latter partially into housing cap.
2. Fit valve in housing, ensuring freedom of movement.
3. Fit spring on top of valve.
4. Fit washer on top of spring.
5. Fit gasket to cap and screw cap into housing, taking care not to dislodge spring or washer. Tighten firmly then fit adjusting screw cap and gasket.
6. Fasten valve housing to pump. The adjusting screw is oriented towards the suction port.

-Balanced type as fitted to MD112, MD200 and MD212.

1. Screw locknut onto adjusting screw and screw latter fully into housing cap.(this is to aid location of pressure pin during assembly) Fit gasket to housing cap.
2. Fit valve in housing, ensuring freedom of movement.
3. Assemble pressure pin, washers and spring as shown in drawing CMP 007 and hold the assembly in position on top of valve.
4. Whilst using a suitable tool to maintain position of pressure pin assembly, fit housing cap assembly over housing,locate pressure pin in adjusting screw. Gradually unscrew adjusting screw until housing cap can be screwed into housing. Firmly tighten cap then fit adjusting screw cap and gasket.
5. Fasten valve housing to pump. The adjusting screw is oriented towards the suction port.

V-F BYPASS VALVE ADJUSTMENT

1. Remove adjusting screw cap.
2. For increased bypass pressure, rotate adjusting screw clockwise (i.e.screw in).
3. For decreased bypass pressure, rotate adjusting screw anticlockwise (i.e. screw out).
4. Firmly lock adjusting screw locknut against cap immediately after any adjustment is made then refit adjusting screw cap and gasket.

NOTE: Bypass valves characteristically exhibit two distinct pressures during their operation.

- a) The setting or cracking pressure which occurs when product initially begins to be bypassed against the preset spring load.
- b) Maximum pressure, which occurs when the full flow of the bypassed product passes through the bypass valve.

It is important to ensure both these above characteristics are understood fully in order to correctly apply the Bypass Valve in a given system.

SECTION VI – TROUBLE SHOOTING

VI-A PUMP FAILS TO PRIME OR DELIVER LIQUID

1. No liquid in tank.
2. Incorrect direction of rotation.
3. Speed too low:
 - (a) If motor driven, check speed, line voltage and phases.
 - (b) If engine driven, check governor setting and engine speed.
4. System discharge head too high - check system head, friction losses and bypass valve setting.
5. Excessive suction restrictions - check NPSH available (inadequately sized suction piping may cause high friction losses, vapour pressure of liquid may be too high). Check with vacuum or compound gauge.
6. Air leaks and/or air pockets in suction line - check suction piping.
7. Bypass valve open due to obstruction under seat of valve or setting too low.
8. Suction filter/strainer blocked or leaking air.
9. Pump cannot clear vapour due to excessive discharge pressure e.g. static head.

VI-B LOW OUTPUT

1. Discharge head too high.
2. Entrained air or gases in liquid pumped.
3. Strainer offering excess resistance to flow.
4. Suction and/or discharge pipes of insufficient diameter, causing excessive friction loss.
5. Bypass valve pressure setting too low - Increase pressure by screwing in adjusting screw. DO NOT exceed pump or system design pressure, or overload motor etc.
6. Insufficient NPSH available.
7. Excess axial clearance setting of rotor to cover.
8. Excess clearances in pump due to wear.

VI-C EXCESSIVE POWER CONSUMPTION

1. Differential pressure higher than rating.
2. Liquid properties not as specified - check viscosity.
3. Rotating parts bind - check for proper clearances or foreign matter in pump.
4. Bearings worn - inspect and replace as required.
5. Obstructions in pipe lines, clogged strainers, partially open valves.
6. Pump speed too high.
7. Voltage too low.

VI-D PUMP IS NOISY

1. Cavitation is taking place - increase NPSH by:
 - (a) Removing suction line restrictions created by:
 - (i) Inadequate pipe sizes / excessive line lengths.
 - (ii) Incorrect selection of valves, fittings etc.
 - (iii) Strainer not permitting free flow of liquid to pump.
 - (b) Increasing static head in suction vessel.
 - (c) Reduce product viscosity.
2. Rotating parts bind - check for proper clearances.
3. Pump and driver misaligned - check coupling and realign as required.


PARTS DESIGNATION FOR MD100, MD114, MD112, MD200 and MD212.

Note: Refer Drg CMP002B

ITEM NO.	DESCRIPTION	QTY
1	BODY	1
3	COVER	1
3A	" PLATE	1
5	" GASKET	1
5A	" PLATE GASKET	1
6	" LOCATION PIN	1
7	SETSCREWS - COVER	6 (7 required for MD212)
17	GLAND PLATE	1
19	SETSCREWS - SEAL/GLAND PLATE	2
21	PACKING	7 RINGS OF 9.5 mm SQ' PACKING
22	ROTATING FACE	1
23	STATIONARY FACE	1
24	DRIVE WASHER	1
25	SPRING	1
26	DRIVE SCREW	1
27	MECHANICAL SEAL PLATE	1
29	'O' RING STATIONARY	1
30	'O' RING ROTATING	1
31	CIRCLIP	1
32	CIRCLIP RETAINER	1
33	ACCESS PLUG	1
36	OUTER ROTOR ON SHAFT	1
42	SHAFT SETSCREW	1
43	" WASHER	1
60	INNER ROTOR	1
61	" " BEARING	1
62	" " PIN	1
63	" " NUT	1
64	" " WASHER	1
68	BRACKET	1
69	ROTOR BEARING	1
* 69A	EXTRACTION WASHER	1
70	GASKET - BRACKET	1
71	SETSCREWS - BRACKET	4
74	BALL BEARING	1
75	RACE CARRIER	1
80/84	" " INNER/OUTER SEAL	2
81	" OUTER LOCKRING	1
83	SPACER	1
100	LANTERN RING	1
	GRUBSCREW - LOCKRING	1
	PLUGS	1
	COMPRESSION ELBOWS	4
	SCAVENGE TUBE	1
	BYPASS GASKETS	2

As there are many configurations of pumps covered by this parts list, not all the parts listed will be in any one pump. Before ordering parts, check that the items ordered are fitted to your pump.

* Extraction washer is only fitted to pumps with carbon bearings and mechanical seal.

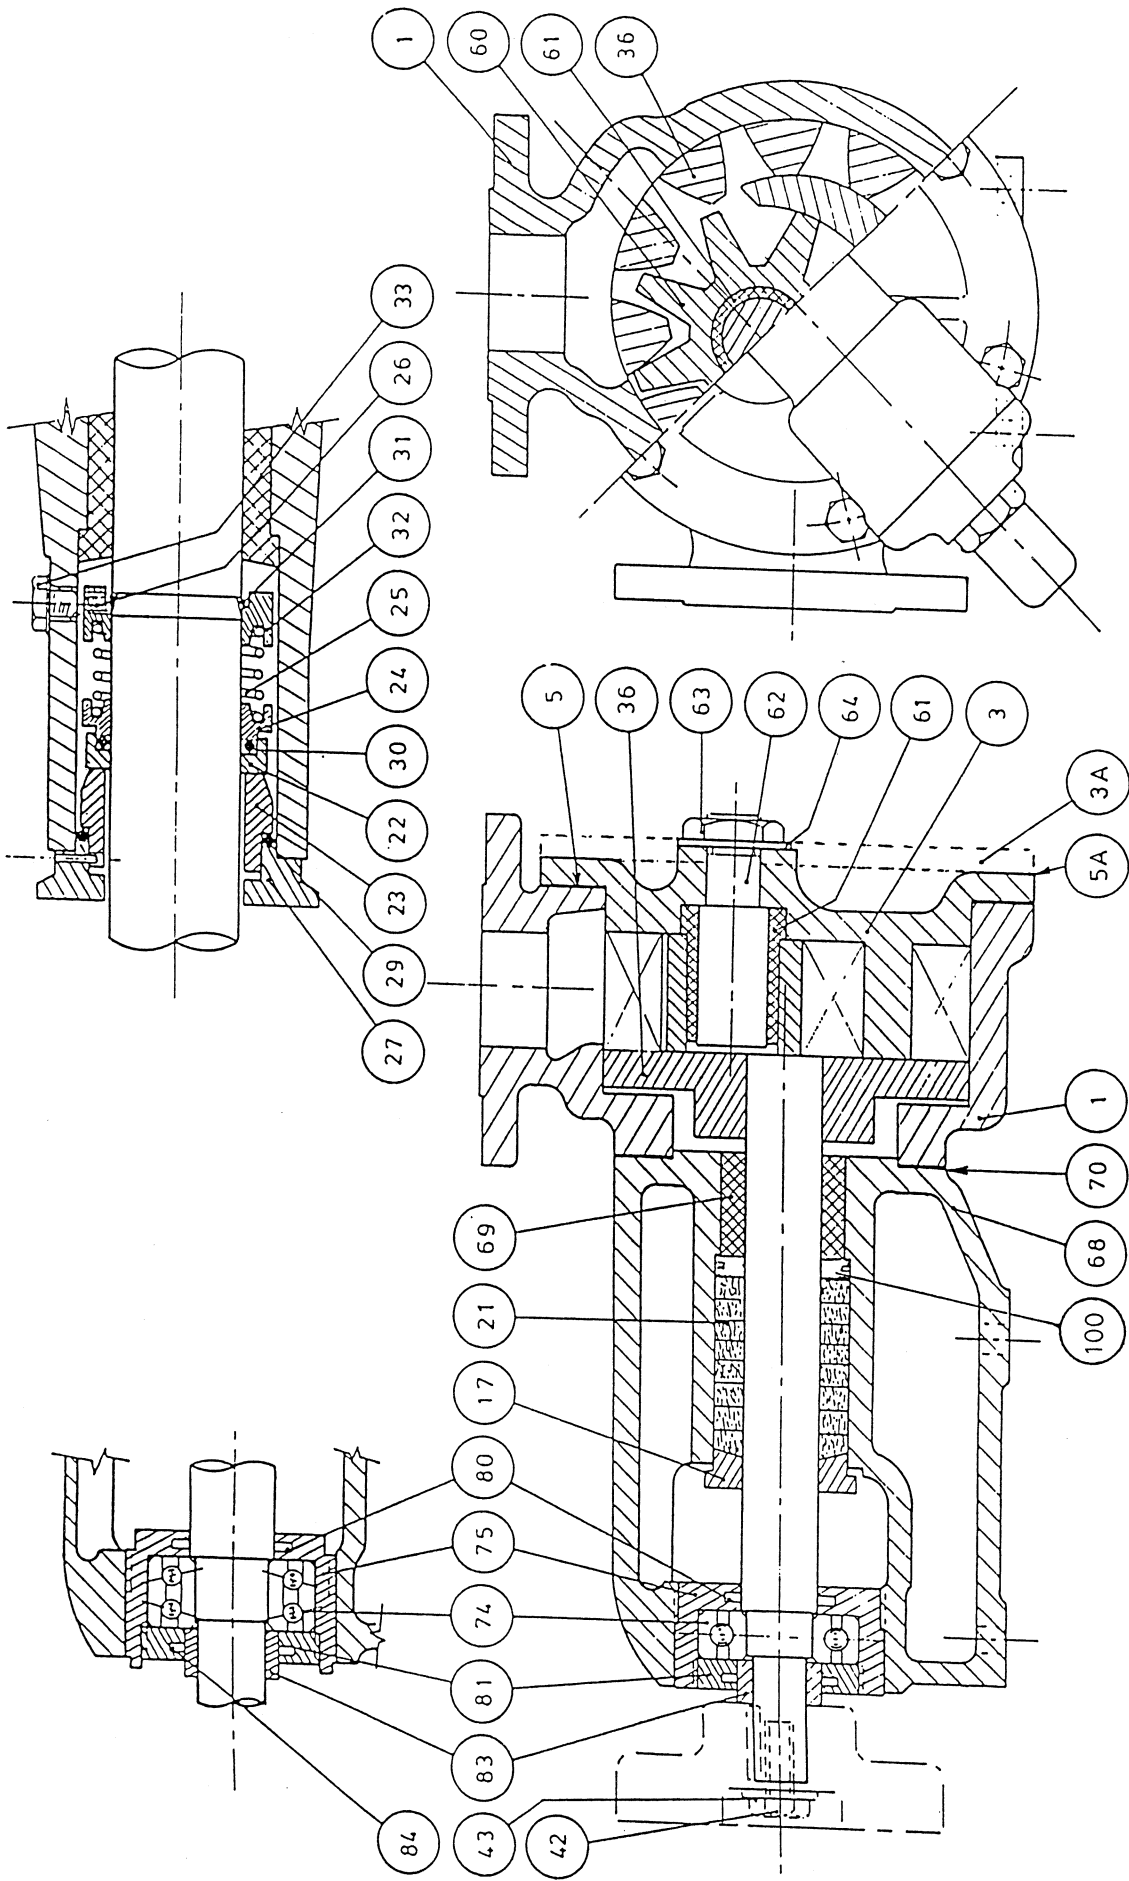


DWG No CMP002B

PARTS DESIGNATION FOR MD SERIES MODELS

MD100, MD114, MD112, MD200, & MD212

PARTS DESIGNATION - BYPASS VALVES
 Drawing No CMP 007

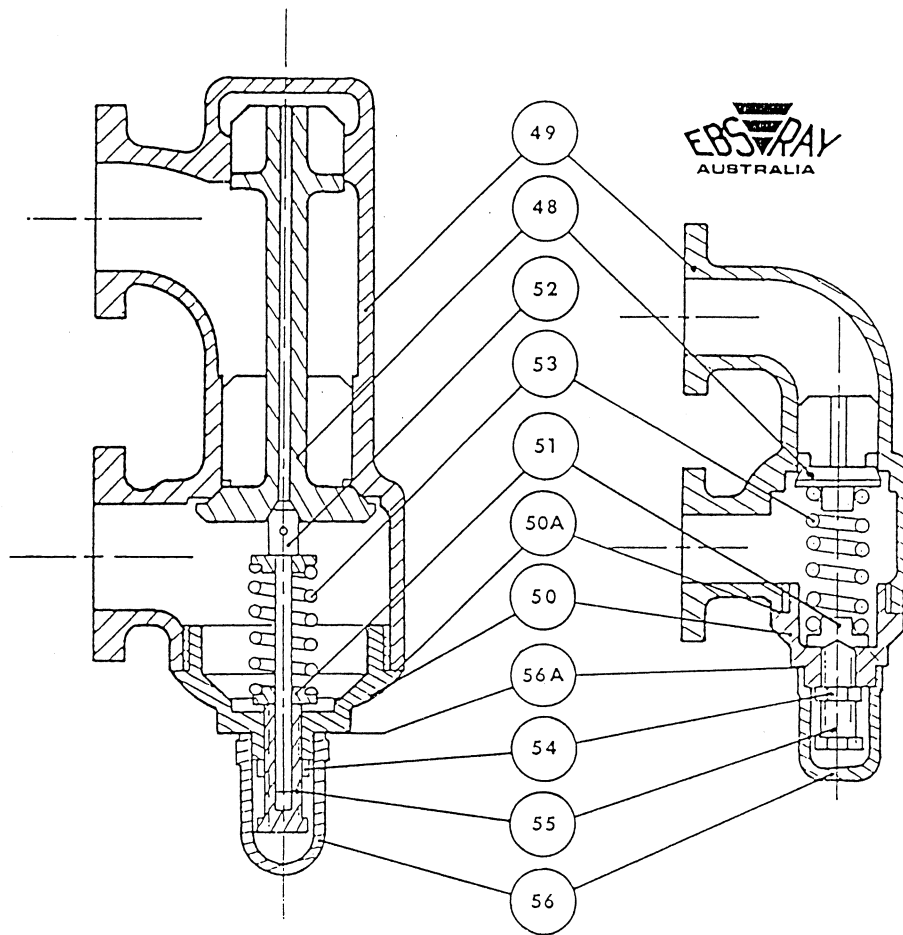

ITEM NO.	DESCRIPTION	To Suit MD112, MD200 & MD212	To Suit MD100 & MD114
		QTY	QTY
48	BYPASS VALVE	1	1
49	HOUSING - BYPASS VALVE	1	1
50	CAP - BYPASS VALVE HOUSING	1	1
50A	GASKET - BYPASS CAP	1	1
51	SPRING RETAINING WASHER	2	1
52	PRESSURE PIN	1	0
53	SPRING	1	1
54	LOCKNUT - ADJUSTING SCREW	1	1
55	ADJUSTING SCREW	1	1
56	CAP - ADJUSTING SCREW	1	1
56A	GASKET - BYPASS SCREW CAP	1	1